



SORRENTO INVERTER SERIES

CASSETTE SERIES

USER MANUAL



IMPORTANT:



Please read this manual carefully before installing or operating the machine. Please keep this manual for future reference.

Please check the applicable models, technical data, F-GAS (if any) and manufacturer information from the "Instruction Manual - Product Sheet" in the outdoor unit packaging.
(European Union products only)

Index

Safety precautions.....04

User Manual

Unit Specifications and Features.....08

1. Indoor unit display.....08
2. Operating temperature.....10
3. Other features11

Care and maintenance.....12

troubleshooting.....14

Installation Manual

| | |
|--|-----------|
| Accessories | 17 |
| Installation summary | 18 |
| Parts of the unit | 19 |
| Installation of the indoor unit | 21 |
| 1. Select the installation location..... | 21 |
| 2. Hanging the indoor unit..... | 23 |
| 3. Drill a hole in the wall for the connecting pipes | 25 |
| 4. Connect the drainage hose | 26 |
| Installing the external unit | 28 |
| 1. Select the installation location..... | 28 |
| 2. Install the drainage joint..... | 29 |
| 3. Fix the outdoor unit | 29 |
| Connecting the refrigerant pipes | 31 |
| A. Note on tube length..... | 31 |
| B. Connection instructions - Refrigerant pipe | 32 |
| 1. Cut tube | 32 |
| 2. Remove burrs | 32 |
| 3. Flared tube end..... | 32 |
| 4. Connect the pipes..... | 33 |
| C. Installing the throttle valve (some models) | 34 |
| Wiring | 35 |
| 1. Wiring the outdoor unit | 36 |
| 2. Wiring the indoor unit | 37 |
| Air evacuation | 40 |
| 1. Evacuation instructions | 40 |
| 2. Note on adding refrigerant | 41 |
| Panel Installation | 42 |
| Running the test | 47 |

Safety precautions

Read safety precautions before installation and operation.

Improper installation resulting from failure to follow the instructions may cause serious damage or injury.

Information warning of potential damage or injury is marked with **ATTENTION** or **CAUTION**.



ATTENTION

This symbol indicates the possibility of personal injury or death.



CAUTION

This symbol indicates the possibility of material damage or serious consequences.



ATTENTION

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, without supervision or if they have been given instructions on how to use the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision (EN Standard Requirements).

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, without supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



WARNINGS FOR USE OF THE PRODUCT

- If an abnormal situation (such as a burning smell) occurs, immediately turn off the unit and disconnect the power. Contact your dealer for instructions on how to avoid electric shock, fire, or injury.
- **Not** Insert fingers, rods or other objects into the air inlet or outlet. This may cause injury, as the fan may rotate at high speeds.
- **Not** use flammable sprays such as hairspray, hairspray or paint near the unit. This may cause a fire or combustion.
- **Not** operate the air conditioner near or in places with combustible gases. The emitted gas may accumulate around the unit and cause an explosion.
- **Not** Operate the air conditioner in a humid room such as a bathroom or laundry room. Excessive exposure to humidity can cause electrical components to short out.
- **Not** exposing the body directly to cold air for a prolonged period of time.
- **Not** allow children to play with the air conditioner. Children should be supervised at all times when they are near the unit.
- If the air conditioner is used together with burners or other heating devices, ventilate the room thoroughly to avoid oxygen deficiency.
- In some functional environments, such as kitchens, server rooms, etc., the use of specially designed air conditioners is strongly recommended.

WARNINGS CLEANING AND MAINTENANCE

- Turn off the device and unplug the power supply before cleaning. Otherwise, electric shock may occur.
- **Not** clean the air conditioner with excessive amounts of water.
- **Not** Clean the air conditioner with combustible detergents. Combustible detergents may cause fire or deformation.



CAUTION

- Turn off the air conditioner and unplug the power supply if you will not use it for a long time. Turn off and unplug the unit during thunderstorms.
- Make sure that condensation water can drain away from the unit without obstruction.
- **Not** operate the air conditioner with wet hands. This may result in electric shock. **Not** use the device for purposes other than those intended for use. **Not** climb or place objects on top of the outdoor unit.
- **Not** leaving the air conditioner running for long periods of time with doors or windows open, or if the humidity is very high.



ELECTRICAL WARNINGS

- Use only the specified power cord. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Keep the power plug clean. Remove any dust or dirt that accumulates on or around the plug. Dirty plugs may cause fire or electric shock.
- **Not** Pull the power cord to unplug the unit. Hold the plug firmly and pull it out of the outlet. Pulling directly on the cord may damage it, which may cause fire or electric shock.
- **Not** change the length of the power cord or use an extension cord to power the unit.
- **Not** share the electrical outlet with other appliances. Inadequate or insufficient electrical power may cause fire or electric shock.
- The product must be properly grounded when installed to avoid the occurrence of electric shock.
- For all electrical work, follow all local and national wiring standards, regulations and the Installation Manual. Connect wires securely and securely to prevent external forces from damaging the terminal. Improperly made electrical connections can overheat and cause fire and electric shock. All electrical connections must be made in accordance with the Wiring Diagram located on the indoor and outdoor unit panels.
- All wiring must be arranged correctly to ensure that the control board cover can close properly. If the control board cover is not closed properly, it may promote corrosion and cause the connection points on the terminal to heat up, resulting in fire or electric shock.
- If the power supply is connected to the mains, a isolating device must be installed on all poles with at least 3 mm contact gap and which has a leakage current that can exceed 10 mA. The leakage current monitoring device (RCD) must have a rated residual operating current not exceeding 30 mA and incorporate disconnection of fixed wiring in accordance with wiring rules.

NOTE THE FUSE SPECIFICATIONS

The air conditioner printed circuit board (PCB) is designed with a fuse for overcurrent protection. The specifications of the fuse are printed on the PCB, such as:

T3.15A/250VAC, T5A/250VAC, etc.

T20A/250VAC(< =24000Btu/h units), T30A/250VAC(>24000Btu/h units)

NOTE:For units with R32 or R290 refrigerant, only the explosion-proof ceramic fuse can be used.



WARNINGS FOR PRODUCT INSTALLATION

1. Installation must be done by an authorized dealer or specialist. Faulty installation may cause water leakage, electric shock or fire.
2. Installation must be done according to the instructions. Improper installation may cause water leakage, electric shock or fire.
(In North America, installation must be performed according to NEC and CEC requirements by authorized personnel only.)
3. Contact an authorized technician for repair or maintenance of this unit. This appliance must be installed in accordance with national wiring regulations.
4. Use only the specified accessories, parts and components supplied for installation. Using non-standard parts may cause water leakage, electric shock, fire and unit failure.
5. Install the unit on a stable surface that can support the weight of the unit. If the location selected is not able to support the weight of the unit, or if the installation is not performed properly, the unit may fall and cause serious injury and damage.
6. Install drainage pipes according to the instructions in this manual. Improper drainage may cause water leakage and damage to household items.
7. For units that have an auxiliary electric heater, **Not** Install the unit within 1 meter (3 feet) of combustible materials.
8. **Not** Install the unit in a location where it may be exposed to combustible gas leaks. If combustible gas accumulates around the unit, it may cause a fire.
9. Do not apply power until all work has been completed.
10. When moving or relocating the air conditioner, use experienced technicians to disengage and reinstall the unit.
11. To install the appliance on its stand, read the detailed information in the sections "Installing the indoor unit" and "Installing the outdoor unit".

Note on fluorinated gases (not applicable to the unit using R290 refrigerant)

1. This air conditioning unit contains fluorinated greenhouse gases. For specific information on the type of gas and the quantity, please refer to the relevant label on the unit itself or to the "User Manual - Product Sheet" inside the outdoor unit packaging (European Union products only).
2. Installation, service, maintenance and repair of this unit must be performed by a certified technician.
3. Uninstallation and recycling of the product must be performed by a certified technician.
4. For equipment containing fluorinated greenhouse gases (in quantities equal to or greater than 5 tonnes of CO₂ equivalent to, but less than 50 tonnes of CO₂ equivalent), if the system is equipped with a leak detection system, it must be checked at least every 24 months.
5. If the unit is checked for leaks, it is strongly recommended that a proper record of all checks is kept.



CAUTION for the use of R32/R290 refrigerant

- When using a flammable refrigerant, the appliance must be placed in a well-ventilated area, and the size of the room must correspond to the specific surface area for operation.

For models with R32 refrigerant:

The appliance must be installed, operated and maintained in a room with a surface area greater than X m². The appliance must not be installed in an unventilated space, if such space is less than X m²

(Please observe the following instructions.)

| Model (Btu/h) | Amount of refrigerant to be load (kg) | Installation height | Minimum surface area of the rooms (m ²) |
|---------------|---------------------------------------|---------------------|---|
| ≤12000 | ≤1.11 | 2.2m | 1 |
| 18000 | ≤1.65 | 2.2m | 2 |
| 24000 | ≤2.58 | 2.2m | 5 |
| 30000 | ≤3.08 | 2.2m | 7 |
| 36000 | ≤3.84 | 2.2m | 10 |
| 42000-48000 | ≤4.24 | 2.2m | 12 |
| 60000 | ≤4.39 | 2.2m | 13 |

- Reusable mechanical connectors and flared joints are not permitted inside. (Standard requirements **EN**).
- Mechanical connectors used indoors shall have a rate not exceeding 3g/year at 25% of the maximum allowable pressure. When mechanical connectors are reused indoors, the sealing parts shall be renewed. When flared joints are reused indoors, the flared part shall be remanufactured (Standard Requirements **UL**).
- When mechanical connectors are reused indoors, the sealing parts must be renewed. When flared joints are reused indoors, the flared part must be remanufactured (Standard Requirements **IEC**).
- Mechanical connectors used internally must comply with ISO 14903.

European guidelines for waste disposal

This marking, shown on the product or its literature, indicates that waste electrical equipment should not be disposed of with general household waste.



Correct disposal of this product

(Waste electrical and electronic equipment)
electronic

This appliance contains refrigerant and other potentially hazardous materials. For the disposal of this appliance, special collection and treatment is required by law. **Not** dispose of this product as household waste or unsorted municipal waste.

The following options are available for the disposal of this appliance:

- Dispose of the appliance at your local electronic waste collection point.
- When purchasing a new appliance, the dealer will take back the old appliance free of charge.
- The manufacturer will take back the old appliance free of charge.
- Sell the appliance to certified scrap metal dealers.

Special Notice







Disposal of this appliance in vegetation or other natural environments endangers your health and is harmful to the environment. Hazardous substances can enter groundwater and the food chain.

Unit Specifications and Features


Indoor unit display

NOTE: The display panel differs between models. Not all indicators described below are available for the air conditioner you purchased. Please check the display panel of the indoor unit you purchased. The illustrations in this manual are for explanation purposes. The actual shape of your indoor unit may be slightly different. The actual shape shall prevail.

The display panel on the indoor unit can be used to operate the unit in case the remote control has been configured incorrectly or has low batteries.

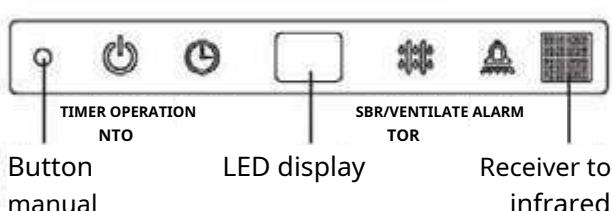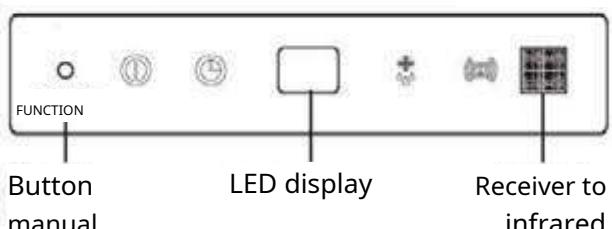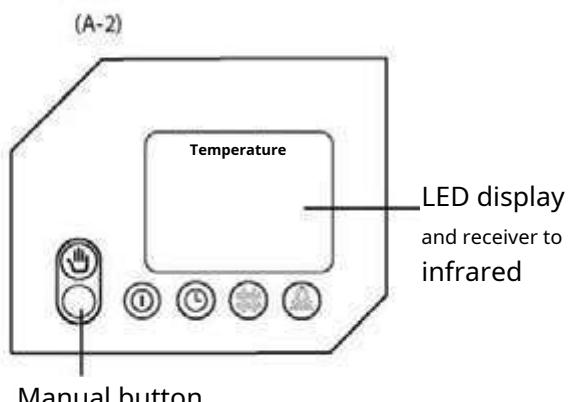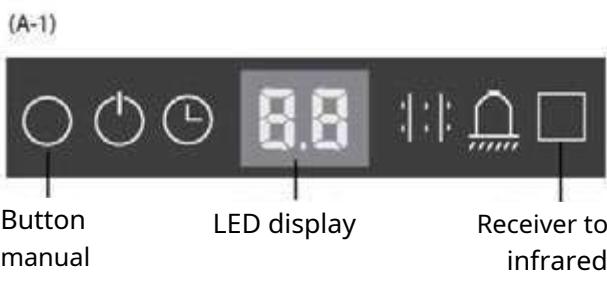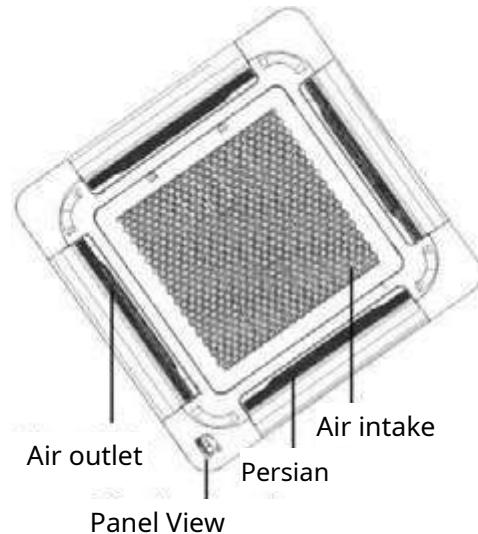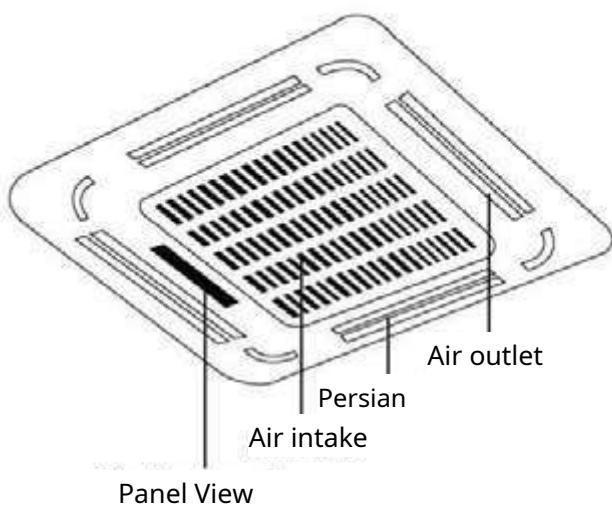

Indicator of operation:



Timer indicator:




**PRE-SBR Indicator:
(preheating/defrosting)**



Alarm indicator:




(A-3)

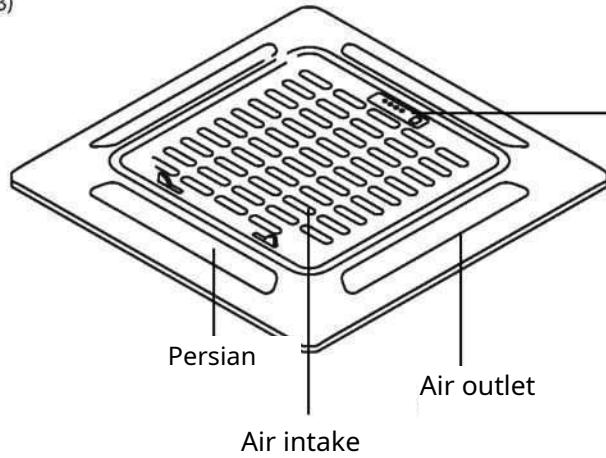

Panel View

Receiver Display
Infrared LED

Button
manual

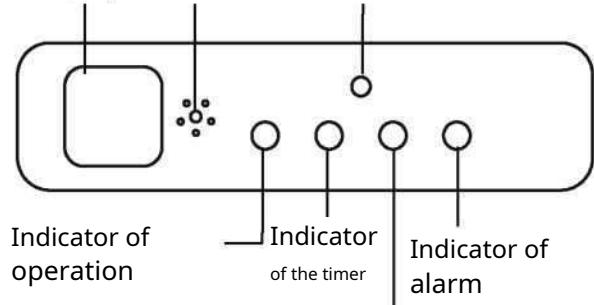


Indicator of
operation

Indicator
of the timer

Indicator of
alarm

PRE-SBR Indicator
(preheat/unfreeze
(name))


(B)

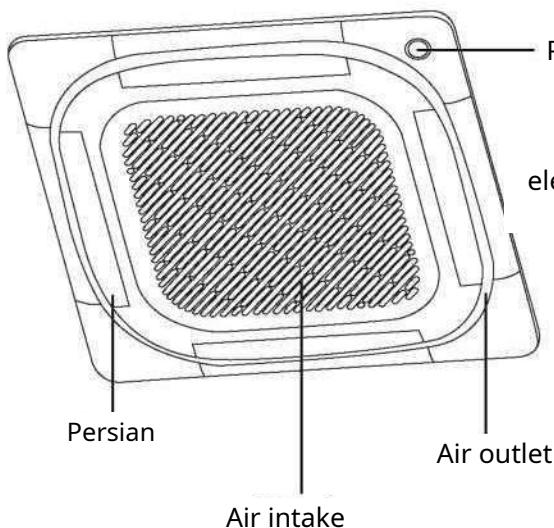

Panel View

Indicator of
electric heating
(some models)
LED display

Timer indicator

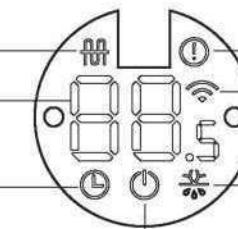

Indicator of
operation

Alarm indicator
When the wireless
control function is
activated (some models)
PRE-SBR Indicator
(preheat/unfreeze
name)

- MANUAL KEY:** This button selects the mode in the following order: AUTO, HEAT COOLING, OFF.

INTENSE COOLING mode: In HIGH COOL mode, the operation indicator light flashes. The system will then switch to AUTO after cooling with high fan speed for 30 minutes. The remote control will be disabled during this operation.

OFF mode: When the display panel is turned off, the unit turns off and the remote control is reactivated.

Operating temperature

When the air conditioner is used outside the following temperature ranges, some safety protection functions may activate and cause the unit to shut down.

Inverter Split Type

| | Mode COOL ME NTO | Mode HEATING TO | Mode DEHUMIDIFIER ACTOR | FOR EXTERNAL UNITS WITH HEATER AUXILIARY ELECTRIC |
|---------------------|--|-------------------------------|---|---|
| Room temperature | 16°C - 32°C (60°F - 90°F) | 0°C - 30°C (32°F - 86°F) | 10°C -32°C (50°F - 90°F) | |
| Outside temperature | 0°C - 50°C (32°F - 122°F) | - 15°C - 24°C (5°F - 75°F) | 0°C - 50°C (32°F - 122°F) | When the outside temperature is below 0°C (32°F), it is highly recommended to keep the unit plugged in at all times to ensure a smooth and continuous operation |
| | - 15°C - 50°C (5°F - 122°F) (For models with systems of cooling to low temperature). | | | |
| | 0°C - 52°C (32°F - 126°F) (For models special tropical) | | 0°C - 52°C (32°F - 126°F) (For models tropical special) | |

Fixed speed typology

| | COOLING mode | Mode HEATING | Mode DEHUMIDIFIER |
|-------------------------|--|---------------------------|---|
| Temperature environment | 16°C-32°C (60°F-90°F) | 0°C-30°C (32°F-86°F) | 10°C-32°C (50°F-90°F) |
| Temperature external | 18°C-43°C (64°F-109°F) | - 7°C-24°C (19°F-75°F) | 11°C-43°C (52°F-109°F) |
| | - 7°C-43°C (19°F-109°F) (For models with cooling systems low temperature) | | 18°C-43°C (64°F-109°F) |
| | 18°C-52°C (64°F-126°F) (For special tropical models) | | 18°C-52°C (64°F-126°F) (For special tropical models) |
| | | | |

NOTE:Relative humidity of the room less than 80%. If the air conditioner operates in excess of these values, its may accumulate condensation. In this case, place the shutter at its maximum angle in a vertical position (vertically to the floor) and set the ventilation mode to HIGH

To further optimize the performance of your drive, proceed as follows:

- Keep doors and windows closed.
- Limit energy consumption by using the TIMER on and off functions.
- Do not block the air inlet or outlet.
- Regularly inspect and clean air filters.

Other features

Default setting

When the air conditioner restarts after a power failure, it returns to the factory settings (AUTO mode, AUTO fan, 24°C (76°F)). This may cause inconsistencies on the remote control and the unit panel. Use the remote control to update the status.

Auto restart (some models)

In case of power failure, the system will stop immediately. When the power returns, the operation lamp of the indoor unit will flash. To restart the unit, press the button **ON/OFF** on the remote control. If the system has an auto restart function, the unit restarts with the same settings.

Three-minute protection function (some models)

A protective function prevents the air conditioner from turning on for about 3 minutes when it restarts immediately after operation.

Shutter angle memory function (some models)

Some models are designed with a shutter angle memory function. When the unit restarts after a power failure, the shutter's horizontal slat angle will automatically return to the previous position. The shutter's horizontal slat angle should not be too small, as condensation may form and drip into the machine. To reset the shutter, press the manual button, which will reset the shutter's horizontal slat settings.

Refrigerant leak detection system (some models)

If there is a refrigerant leak, the LED DISPLAY will display the refrigerant leak error code and the LED indicator will flash.

Care and maintenance

Cleaning the indoor unit



BEFORE CLEANING OR MAINTENANCE

ALWAYS TURN OFF THE AIR CONDITIONER AND DISCONNECT THE POWER SUPPLY BEFORE CLEANING OR MAINTENANCE.



CAUTION

To clean the unit use only a soft, dry cloth.

If the unit is particularly dirty, you can use a cloth soaked in warm water to clean it.

- **Not** use chemicals or chemically treated cloths to clean the unit
- **Not** Use benzene, paint thinner, polishing powder or other solvents to clean the unit. They may cause cracking or deformation of the plastic surface.
- **Not** use water hotter than 40°C (104°F) to clean the front panel. This may cause deformation or discoloration of the panel.

Cleaning the air filter

A clogged air conditioner can reduce the cooling efficiency of the unit and can also be harmful to your health. Make sure to clean the filter once every two weeks.




CAUTION: DO NOT REMOVE OR CLEAN THE FILTER YOURSELF

Removing and cleaning the filter can be dangerous. Removal and maintenance must be performed by a certified technician.

1. Remove the air filter.
2. Clean the air filter by vacuuming the surface or washing it in warm water with a mild detergent.
3. Rinse the filter with clean water and let it air dry. **NOT** Let the filter dry in direct sunlight.
4. Reinstall the filter.

If you use water, the Se side Yes uses The input must be a vacuum cleaner, the side facing down and inlet must face the away from the flow of water. vacuum cleaner.

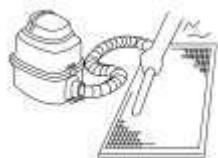

CAUTION

- Before replacing the filter or cleaning, switch off the appliance and disconnect the power supply.
- When removing the filter, do not touch the metal parts of the unit. Sharp metal edges may cause injury.
- Do not use water to clean the inside of the indoor unit. This may destroy the insulation and cause electric shock.
- Do not expose the filter to direct sunlight while drying. This may shrink the filter.

CAUTION

- Maintenance and cleaning of the outdoor unit must be performed by an authorized dealer or authorized service provider.
- Any repairs to the unit must be performed by an authorized dealer or authorized service provider.

Maintenance - Long periods of non-use


If you plan not to use the air conditioner for a long period of time, proceed as follows:




Clean all filters



Activate the function
FAN until
the unit does not dry
completely

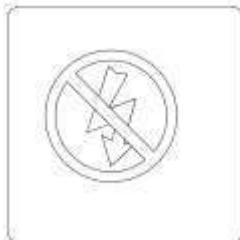

Turn off the unit and
unplug the power

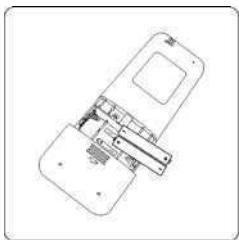


Remove the batteries from the
remote control

Maintenance - Seasonal Pre-Use Inspection

After long periods of non-use, or before periods of frequent use, proceed as follows:



Check if the cables are
damaged

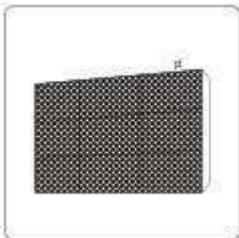

Clean all filters



Check for the presence of
losses



Replace the batteries



Make sure there are no blockages in the entrances and exits
of the air

troubleshooting



SAFETY PRECAUTIONS

If any of the following conditions occur, turn off the appliance immediately!

- The power cord is damaged or abnormally hot
- There is a burning smell
- The unit makes loud or abnormal sounds
- A power fuse blows or the circuit breaker trips frequently
- Water leaks or objects fall into or out of the unit

NOT TRY TO SOLVE THESE PROBLEMS

YOURSELF!

CONTACT

AUTHORIZED SERVICE PROVIDER IMMEDIATELY!

Normal situations

The following problems are not malfunctions and in most situations do not require repairs.

| Problem | Possible causes |
|---|---|
| The unit does not turn on when the ON/OFF button is pressed ENTO | The unit has a 3-minute protection function to prevent overload. The unit cannot be restarted within three minutes after being turned off. Cooling and heating models: If the operation lamp and PRE-SBR (Pre-heat/Defrost) indicators are on, it means that the outside temperature is too low and the anti-freeze mode is activated to defrost the unit. In cooling only models: If the "Fan Only" indicator is on, it means that the outside temperature is too low and the anti-freeze mode is activated to defrost the unit. |
| The unit switches from COOL/HEATING mode WARMING up at FAN mode | The unit can change its setting to prevent ice from forming on the unit. Once the temperature increases, the unit will resume operation in the previously selected mode. The set temperature has been reached, at this point the unit turns off the compressor. The unit will restart if the temperature fluctuates again. |
| The indoor unit emits white steam | In humid regions, a large temperature difference between the room air and the air conditioning can cause the emission of white vapor. |
| Both the indoor and outdoor units emit white mist | When the unit restarts in HEAT mode after defrosting, white mist may be emitted due to the humidity generated by the defrosting process. |
| The indoor unit makes noise | When the shutter resets, a rushing sound may occur. A squeaking sound is heard when the system is off or in COOL mode. The noise is also heard when the drain pump (optional) is running. After operating the unit in HEAT mode, a squeaking noise may occur due to the expansion and contraction of the plastic parts of the unit. |
| Both the indoor unit and outdoor unit make noise | A hissing sound is heard during operation: This is normal and is caused by the flow of refrigerant gas through the indoor and outdoor units. A hissing sound is heard when the system starts, has just stopped working or is defrosting: This noise is normal and is caused by the refrigerant gas stopping or changing direction. Squeaking Sound: The normal expansion and contraction of plastic and metal parts caused by temperature changes during operation can cause squeaking noises. |

| Problem | Possible causes |
|---|--|
| The external unit does noise | The unit makes different noises depending on its operating mode. |
| Dust is emitted both from the internal unit than from the external one | The unit may accumulate dust during long periods of non-use, which will be blown out when turned on. This can be reduced by covering the unit during long periods of non-use. |
| The unit emits a bad smell | The unit can absorb odors from the environment (such as furniture, cooking, cigarettes, etc.) that will be emitted during operation. The unit's filters have become moldy and need to be cleaned. |
| The outdoor unit fan does not work | During operation, the fan speed is controlled to optimize the operation of the device. |

NOTE: If the problem persists, contact a local dealer or the nearest customer service center. Provide them with a detailed description of the appliance malfunction and model number.

troubleshooting

If you encounter any problems, please check the following points before contacting repair service.




| Problem | Possible causes | Solution |
|------------------------------------|--|--|
| Poor performance of cooling | The temperature setting may be higher than the room temperature | Lower the temperature settings |
| | The heat exchanger of the indoor or outdoor unit is dirty | Clean the affected heat exchanger |
| | The air filter is dirty | Remove the filter and clean it according to the instructions |
| | The air inlet or outlet of one of the two units is blocked | Turn the unit off, remove the obstruction and turn it back on. |
| | Doors and windows are open | Make sure all doors and windows are closed when operating the unit |
| | Sunlight generates excessive heat | Close windows and curtains during periods of scorching heat or bright sunshine |
| | Too many heat sources in the room (people, computers, electronics, etc.) | Reduce the amount of heat sources |
| | Reduced amount of refrigerant due to leaks or prolonged use over the years | Check for leaks, repair if necessary and top up the coolant. |

| Problem | Possible causes | Solution |
|--|--|---|
| The unit does not work | Power outage | Wait for the power to be restored |
| | The power is off | Turn on the power |
| | The fuse is blown | Replace the fuse |
| | The remote control batteries are dead | Replace the batteries |
| | The unit's 3-minute protection has been activated | Wait three minutes after the unit restarts |
| | The timer is activated | Turn off the timer |
| The unit starts and stops frequently | There is too much or too little refrigerant in the system | Check for leaks and recharge the system with refrigerant. |
| | Incompressible gas or moisture has entered the system. | Evacuate and recharge the system with refrigerant |
| | The system circuit is blocked | Determine which circuit is stuck and replace the faulty equipment |
| | The compressor is damaged | Replace the compressor |
| | The voltage is too high or too low | Install a manostat to regulate the voltage |
| Poor performance of heating | The outside temperature is extremely low | Use the auxiliary heating device |
| | Cold air enters through doors and windows | Make sure all doors and windows are closed during use |
| | Reduced amount of refrigerant due to leaks or prolonged use over the years | Check for leaks, repair if necessary and top up the coolant. |
| The lights keep flashing | | |
| The error code is displayed and begins with the following letters in the indoor unit display panel: • E(x), P(x), F(x) • EH(xx), EL(xx), EC(xx) • PH(xx), PL(xx), PC(xx) | The unit may stop working or continue to work safely. If the lights continue to flash or error codes appear, wait about 10 minutes. The problem may resolve itself. If not, unplug the power, then plug it back in. Turn the unit on. If the problem persists, disconnect the power and contact the nearest customer service center. | |

NOTE: If the problem persists after performing the above checks and diagnostics, immediately turn off the unit and contact an authorized service center.

Accessories

The air conditioning system comes with the following accessories. Use all installation parts and accessories in installing the air conditioner. Improper installation may cause water leakage, electric shock and fire, or equipment failure. The items are not included with the air conditioner and must be purchased separately.

| Name of accessories | Qty (pcs) | Form | Name of accessories | Qty (pcs) | Form |
|--|-----------|---|--|-----------------------------|---|
| Manual | 2~4 |  | Paper template for installation (some models) | 1 |  |
| Sheath soundproofing/insulating (some models) | 1 |  | Shockproof rubber (some models) | 1 |  |
| Sheath soundproofing/insulating (some models) | 1 |  | Exhaust joint (some models) | 1 |  |
| Outlet tube sheath (some models) | 1 |  | Sealing ring (some models) | 1 |  |
| Outlet pipe closure (some models) | 1 |  | Copper nut | 2 |  |
| Ceiling hook (some models) | 4 |  | Magnetic ring (twice wrap the S1 and S2 (P & Q & E) electrical wires around the ring magnetic) (some models) | 1 |  S1&S2(P&Q&E) / P QE |
| Suspension bolt (some models) | 4 |  | Magnetic ring (after installation, hook it to the connection cable between the indoor unit and the outdoor unit) (some models). | It varies in based on model |  |
| Throttle (some units) | 1 |  | Self-tapping screw (some models) | 4 |  |
| Belt (some models) | 4 |  | Band (some models) | 2 |  |
| Duct installation plate (some models) | 1 |  | | | |

Optional accessories


- There are two types of remote control: Wired and Wireless.

Select a remote control according to the customer's preferences and needs and install it in an appropriate place. Consult the catalogs and technical documentation to choose the appropriate remote control.

| Name | Form | Quantity (PC) |
|-------------------------------------|--------------------|---------------|
| Mounting the connecting pipe | Liquid side | Φ6.35(1/4 in) |
| | | Φ9.52(3/8in) |
| | | Φ12.7(1/2in) |
| | Gas side | Φ9.52(3/8in) |
| | | Φ12.7(1/2in) |
| | | Φ16(5/8in) |
| | | Φ19(3/4in) |
| | | Φ22(7/8in) |

Replacement parts must be purchased separately. Consult your dealer for the correct hose size for your unit.


Installation summary

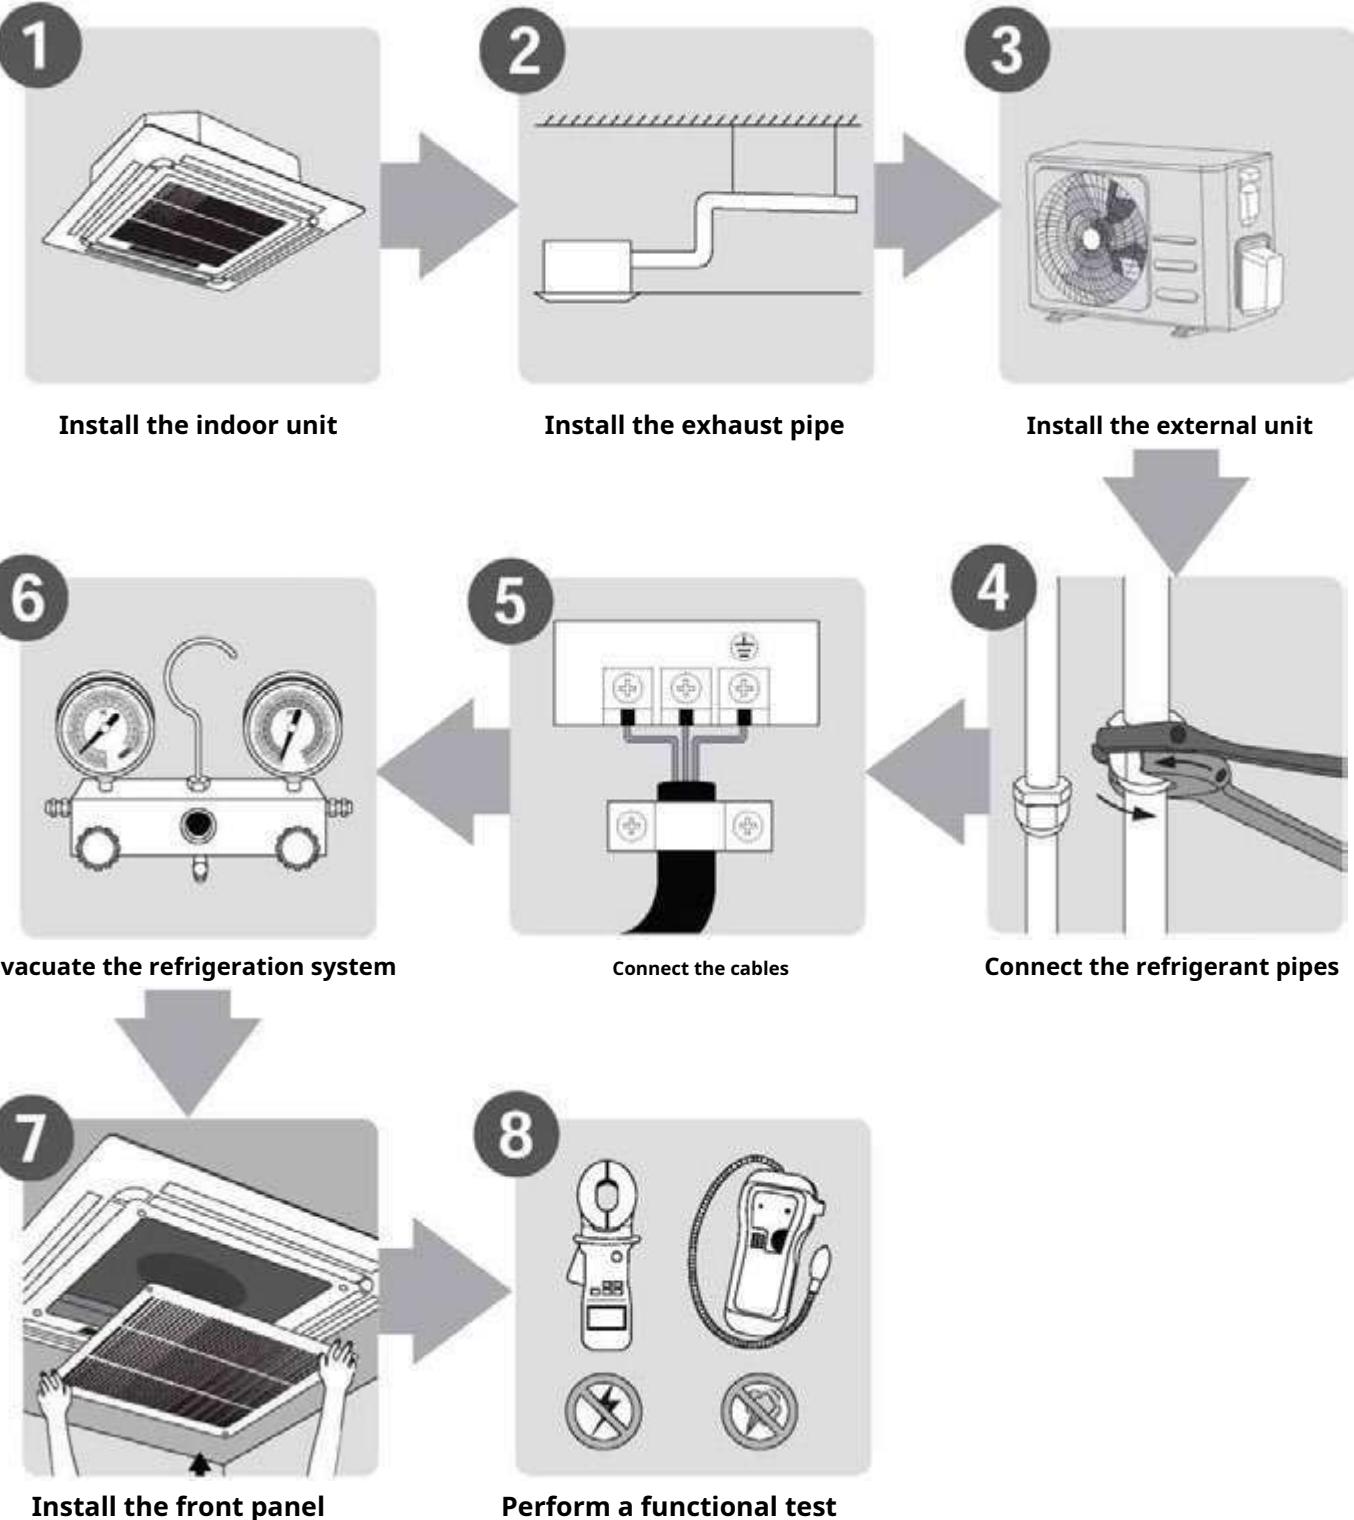

Parts of the unit


NOTE: Installation must be done in accordance with local and national code requirements. Installation may be slightly different in different areas.

(A)

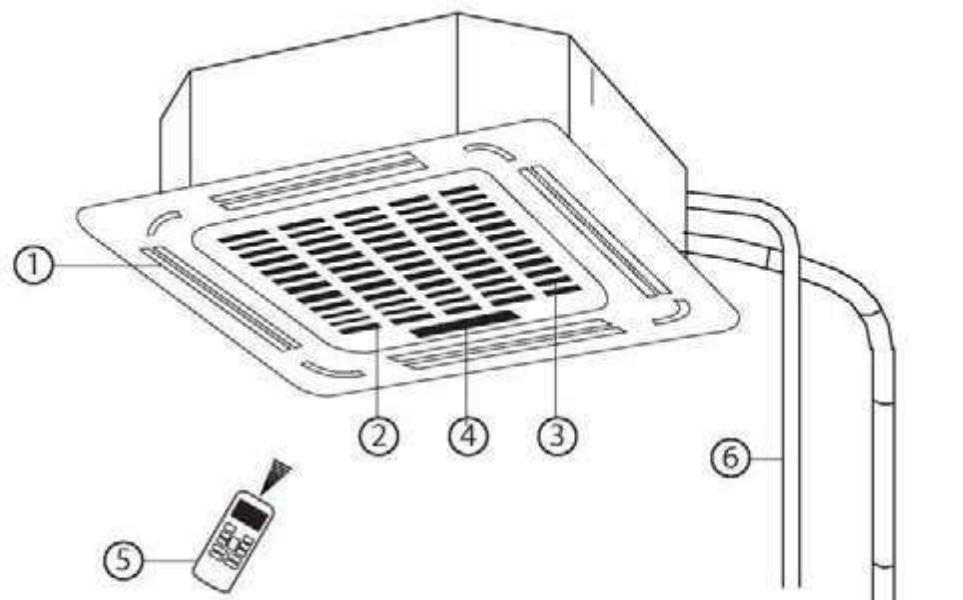


- ① Air outlet
- ② Air intake
- ③ Front grille
- ④ Display Panel Remote
- ⑤ Control
- ⑥ Exhaust pipe

- ⑦ Connecting pipe
- ⑧ Air intake
- ⑨ Air outlet

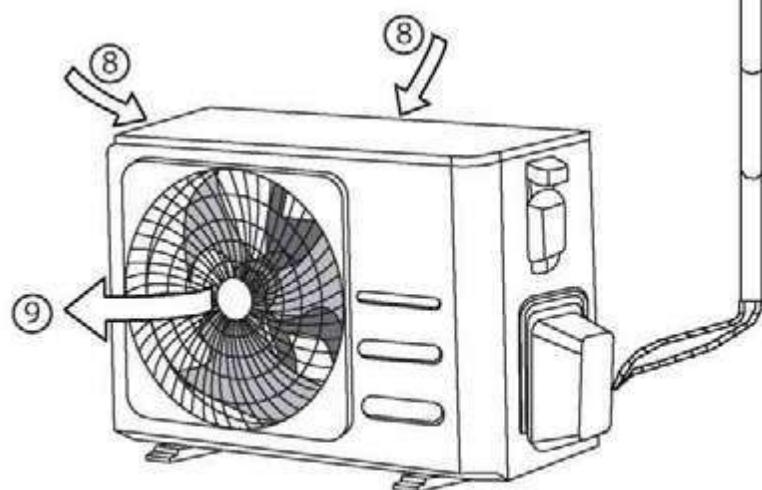

(B)

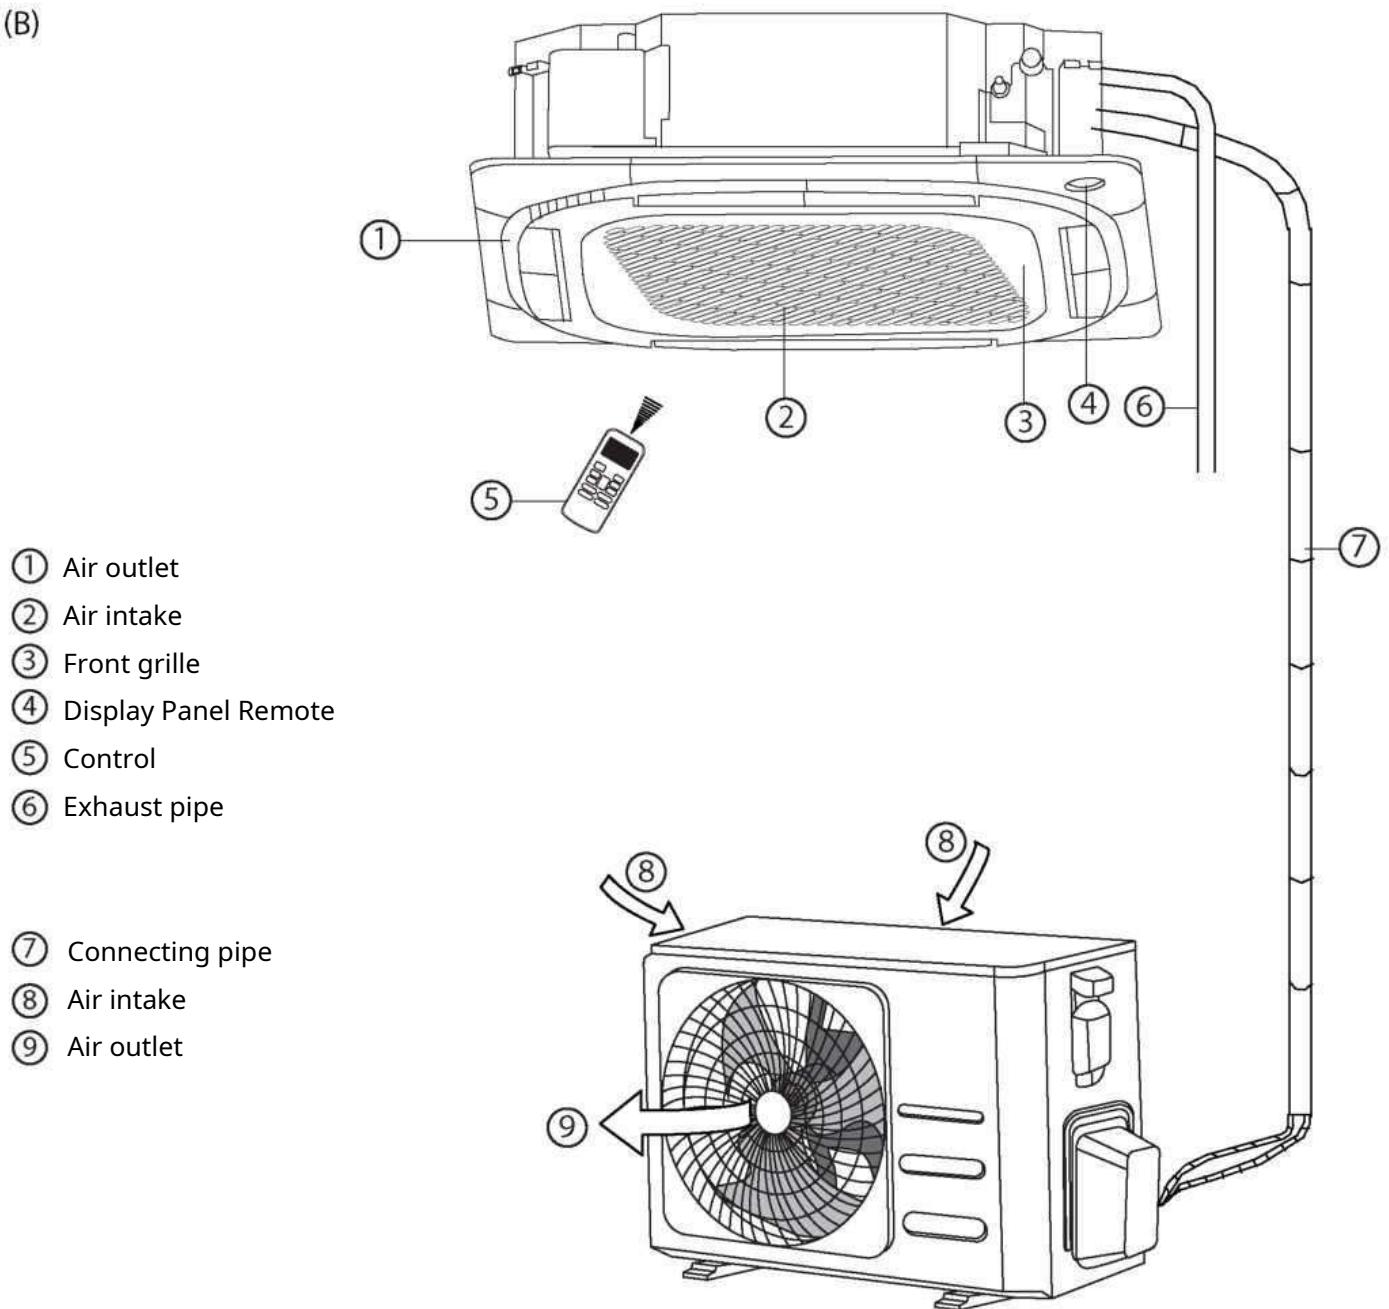

NOTE ON ILLUSTRATIONS

The illustrations in this manual are for explanation purposes only. The actual shape of your indoor unit may differ slightly. The actual shape shall prevail.

Installation of the indoor unit

Installation Instructions - Indoor Unit

NOTE: Installation of the panel should be done after the piping and wiring are completed.

Step 1: Select the installation location

Before installing the indoor unit, you need to choose a suitable location. Below are the standards that will help you choose a suitable location for the unit.

Suitable installation locations meet the following standards:

- There is enough space for installation and maintenance.
- There is enough space for connecting pipes and exhaust pipe.
- The ceiling is horizontal and its structure can support the weight of the indoor unit.
- The air inlet and outlet are not blocked. The air flow is suitable for the size of the room. There is no direct radiation coming from the heaters.


NOT Install the unit in the following locations:

- ∅ Oil drilling or fracking areas Coastal areas with high salt content in the air Areas with caustic gases in the air, such as hot springs Areas subject to power fluctuations, such as factories
- ∅ Closed spaces, such as closets
- ∅ Near natural gas cookers Areas exposed to strong electromagnetic waves Areas where flammable materials or gases are stored
- ∅ High humidity rooms, such as bathrooms or laundry rooms

Recommended distances between the indoor unit and the ceiling



The distance between the indoor unit and the indoor ceiling must meet the following specifications

(A)

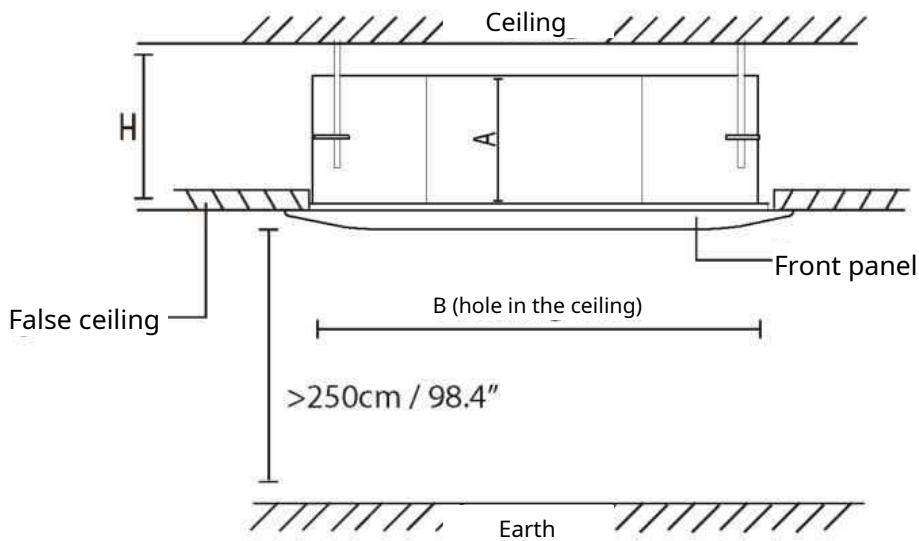

Distance from ceiling to height of indoor unit

| TYPE | MODEL | Length of A (mm/inch) | Length of H (mm/inch) | Length of B (mm/inch) |
|----------------------|-------|--------------------------|--------------------------|--------------------------|
| Models Super-fine | 18-24 | 205/8 | > 235/9.3 | 880/34.5 |
| | 24 | 245/9.6 | > 275/10.8 | |
| | 30 | 205/8 | > 235/9.3 | |
| | 30-48 | 245/9.6 | > 275/10.8 | |
| | 48-60 | 287/11.3 | > 317/12.5 | |
| | 48-60 | 287/11.3 | > 317/12.5 | |
| Compact models | | 260/10.2 | > 290/11.4 | 940/37.0 |
| | | | | 600/23.6 |

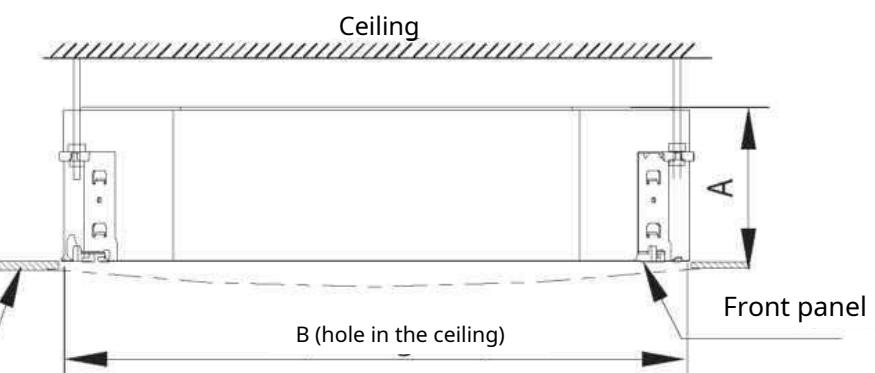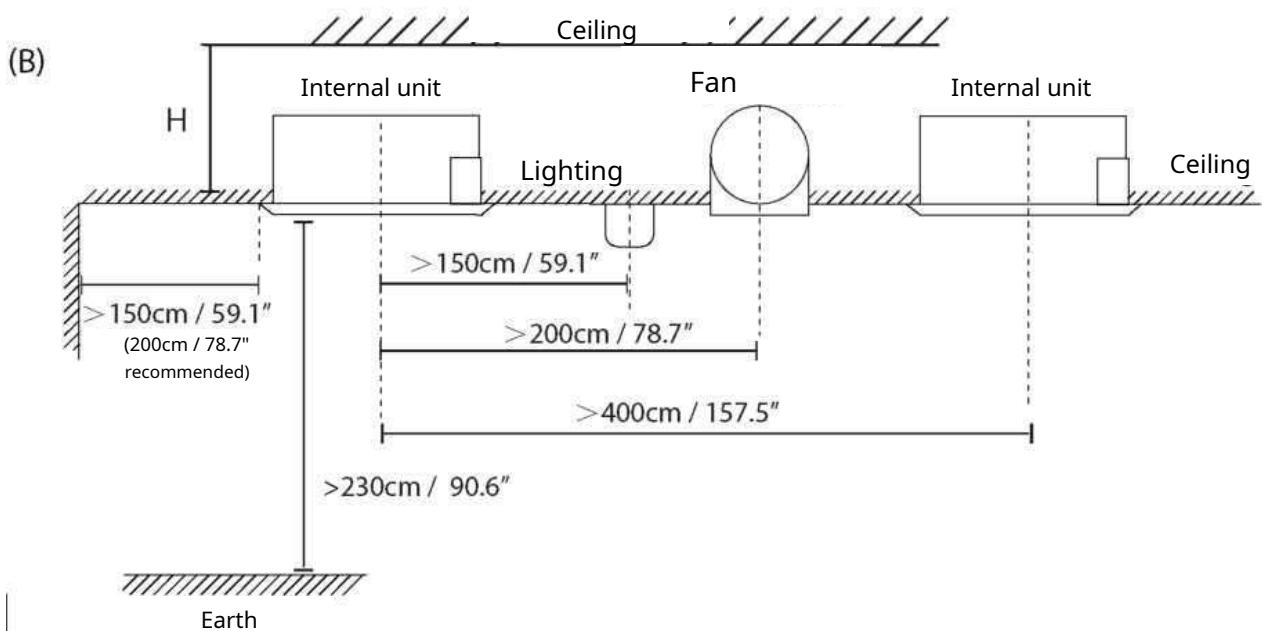

Distance from ceiling to height of indoor unit

| MODEL | Length of A (mm/inch) | Length of H (mm/inch) | Length of B (mm/inch) |
|-------|-----------------------|-----------------------|-----------------------|
| 18-24 | 205/8,03 | 230/9,06 | 900/35.4 |
| 30-42 | 245/9,65 | 271/10.7 | |
| 42-60 | 287/11,3 | 313/12,3 | |

Step 2: Hang the indoor unit

1. Use the supplied paper template to cut a rectangular hole in the ceiling, leaving at least 1m (39") on all sides.


The hole size should be 4cm (1.6") larger than the body size.

Be sure to mark the areas where the holes for the ceiling hooks will be drilled.

(A)

Pipe side of the refrigerant


Exhaust pipe side

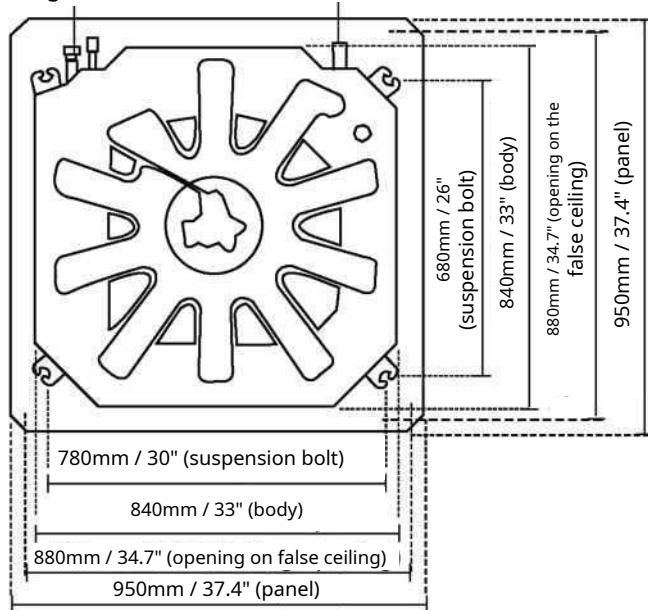

18-48K Super-fine Models Ceiling Hole Size

Pipe side of the refrigerant


Exhaust pipe side

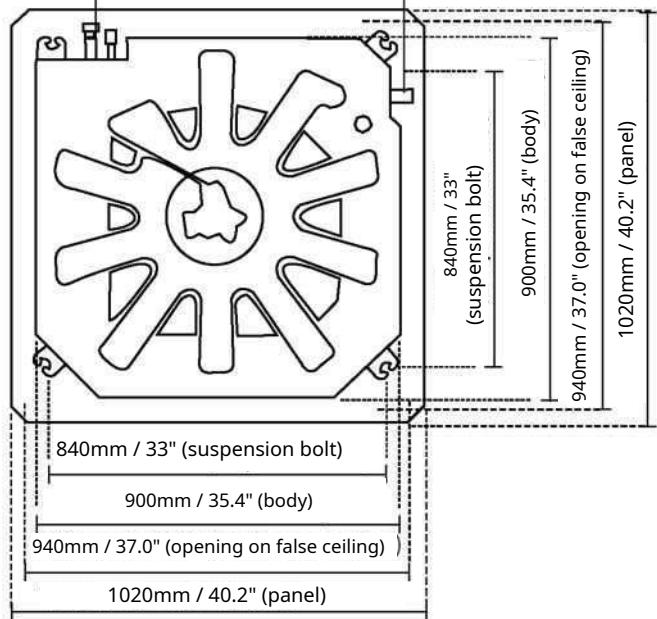


60K models Super-fine ceiling hole size

Exhaust pipe side


Coolant pipe side

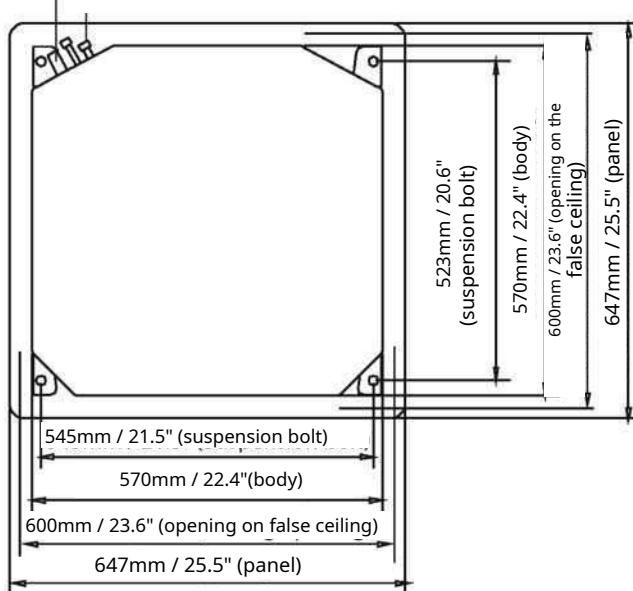

Compact models hole size in false ceiling

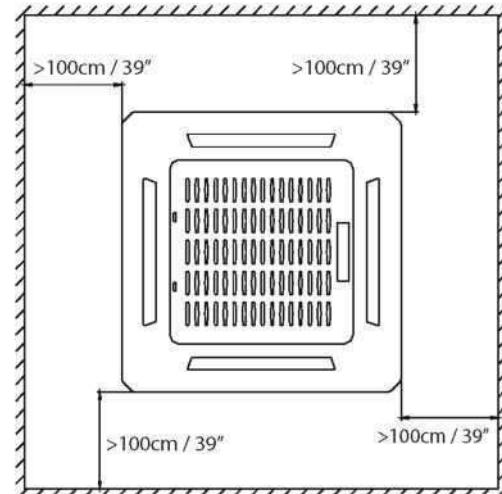

(B)

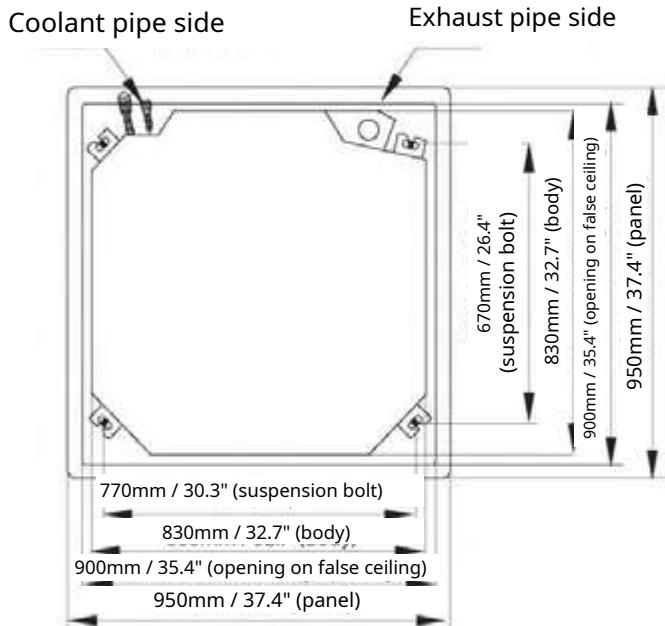**CAUTION**

The unit body must be perfectly aligned with the hole. Make sure the hole size on the unit and the false ceiling are the same before proceeding.

2. (A)

Drill 4 holes 5cm (2") deep at the ceiling mounting locations. Make sure to hold the drill at a 90° angle to the ceiling.

(B)


Drill 4 holes 12cm-15.5cm (4.7"-6.1") deep at the ceiling mounting locations. Make sure to hold the drill at a 90° angle to the ceiling.

3. Using a hammer, insert the ceiling hooks into the holes.

Secure the bolt with the supplied washers and nuts.


4. Place the four suspension bolts.

5. Hang the indoor unit. You will need two people to lift and secure it. Insert the hanging bolts into the hanging holes of the unit. Secure them with the washers and nuts provided.

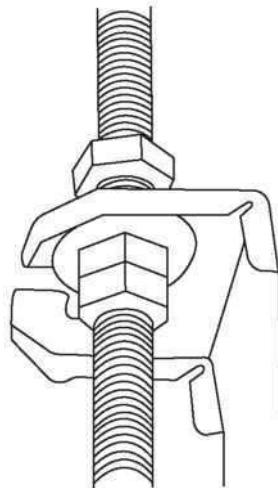


(TO)

NOTE: The bottom of the unit should be 10-18mm (0.4-0.7") (Super-thin models) or 24mm (0.9") (Compact models) higher than the ceiling tile. Generally, L (shown in the figure below) should be half the length of the suspension bolt or long enough to prevent the nuts from coming off.

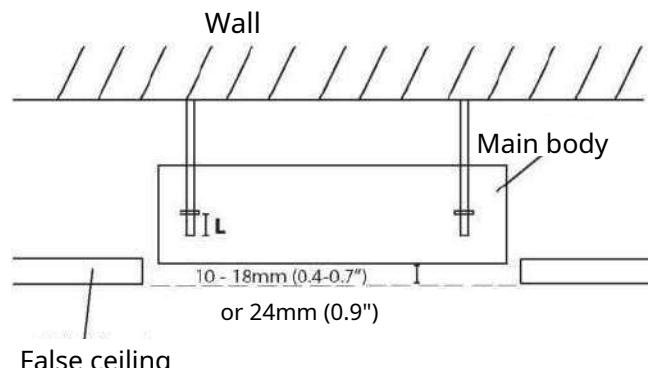

(B)

NOTE: The bottom of the unit should be 10-25mm (0.4-0.98") higher than the ceiling tile. Generally, L (shown in the following figure) should be half the length of the suspension bolt or long enough to prevent the nuts from coming off.

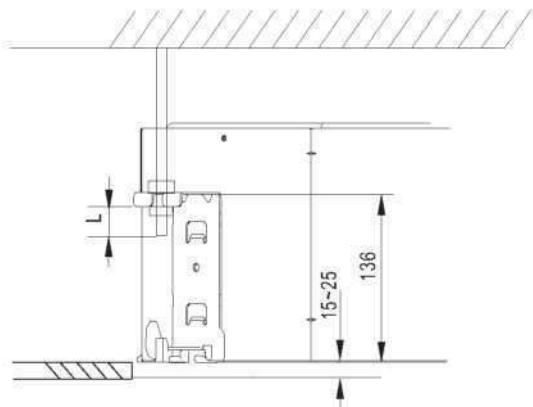


CAUTION

Make sure the unit is completely level. Improper installation may cause water from the drain hose to back up into the unit or cause water to leak.

NOTE: Make sure the indoor unit is level. The unit is equipped with a built-in drain pump and float switch. If the unit is tilted in the opposite direction of the condensate flow (the drain pipe side is raised), the float switch may not work properly and cause water leakage.


(for some models)

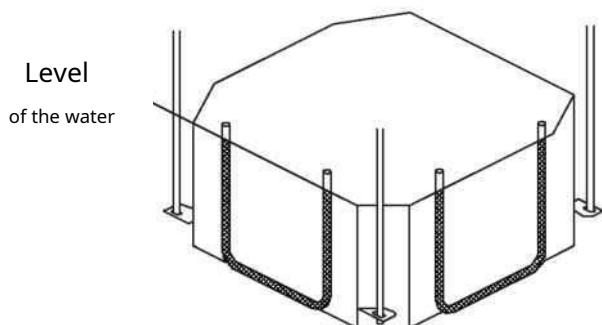

NOTE FOR INSTALLATION IN A NEW HOUSE

When installing the unit in a new home, the ceiling hooks can be recessed in advance. Make sure that the hooks do not loosen due to concrete shrinkage. After installing the indoor unit, fix the installation paper template on the unit with bolts to determine the size and position of the ceiling opening in advance.

Follow the instructions above for the rest of the installation.

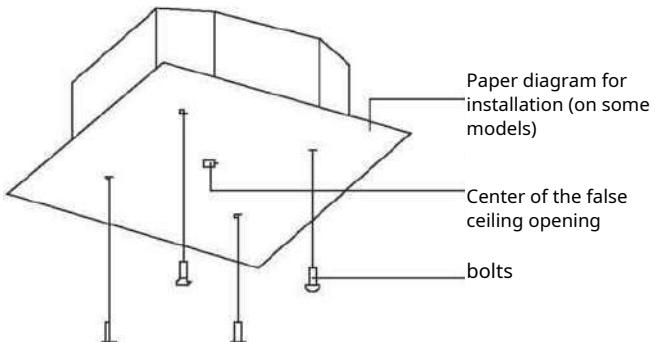


Step 3: Drill the hole in the wall for the connecting pipes

1. Determine the position of the wall hole based on the position of the outdoor unit.
2. Using a 65mm (2.56") or 90mm (3.54") core drill bit (depending on model), drill a hole into the wall. Ensure that the hole is drilled at a slight downward angle, so that the outer end of the hole is approximately 12mm (0.5") lower than the inner end. This will ensure adequate water drainage.
3. Place the wall protection bracelet into the hole. This will protect the edges of the hole and help seal it once the installation process is complete.



CAUTION

When drilling into the wall, be sure to avoid cables, plumbing and other sensitive items.

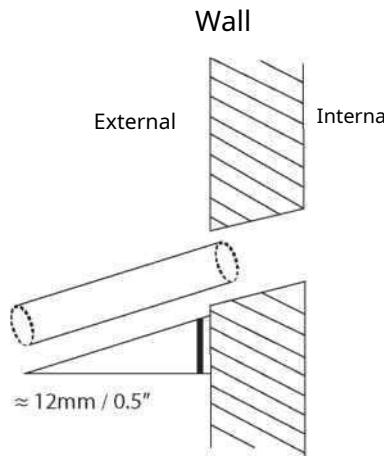

Step 4: Connect the drainage hose

The drain hose is used to drain water from the unit. Improper installation may cause damage to the unit and property.



CAUTION

- Insulate all pipes to prevent condensation from forming, which could cause damage.
- If the drain hose is bent or positioned incorrectly, water leakage may occur and cause the float switch to malfunction.
- In HEATING mode, the outdoor unit drains water. Make sure the drain hose is placed in an appropriate area to prevent water from causing damage or making the area slippery.
- **NOT** Pull the drain hose hard. It may come off.


NOTE ON PURCHASING TUBES

Installation requires polyethylene pipe (outer diameter = 2.5 cm or 3.7-3.9 cm) (depending on model), which can be purchased at a hardware store or retailer.


Installing the internal drainage pipe

Install the drain pipe as shown in the following figure.



(A)

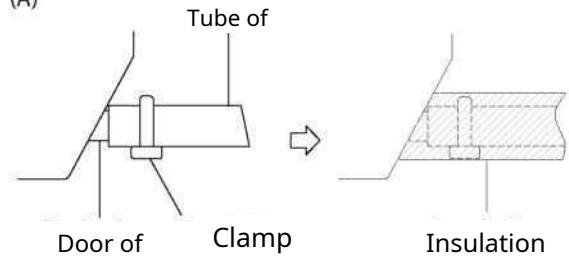

connection of the
Drain pipe

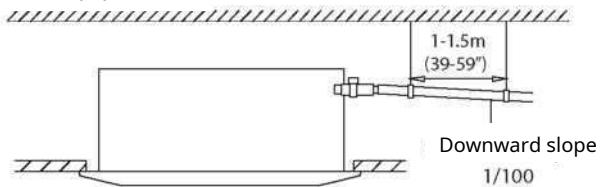


(B)

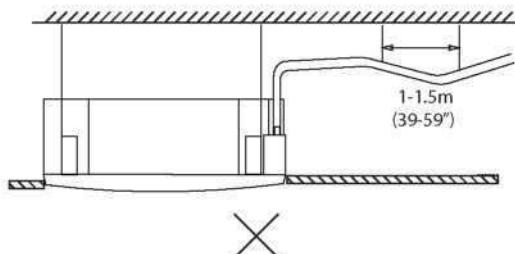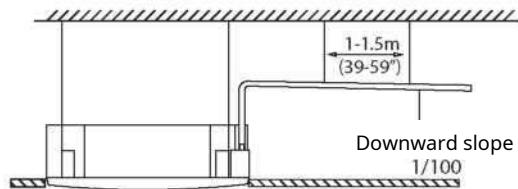

NOTE ON DRAIN PIPE INSTALLATION


- When using an extended drain hose, tighten the internal connection with an additional protective tube to prevent it from loosening.
- The drain hose should slope downward at a gradient of at least 1/100 to prevent water from flowing back into the air conditioner.
- To prevent the hose from sagging, secure it every 1-1.5 m (39-59").
- If the drain pipe outlet is higher than the pump joint, raise the drain pipe for the indoor unit. The raised part of the pipe should not exceed 75 cm (29.5") from the ceiling tile and should be less than 30 cm from the indoor unit (11.8") (depending on the model). Improper installation may cause water to backflow into the unit and cause flooding.
- To avoid air bubbles, keep the drain hose level or slightly inclined (<75mm / 3") (some models).

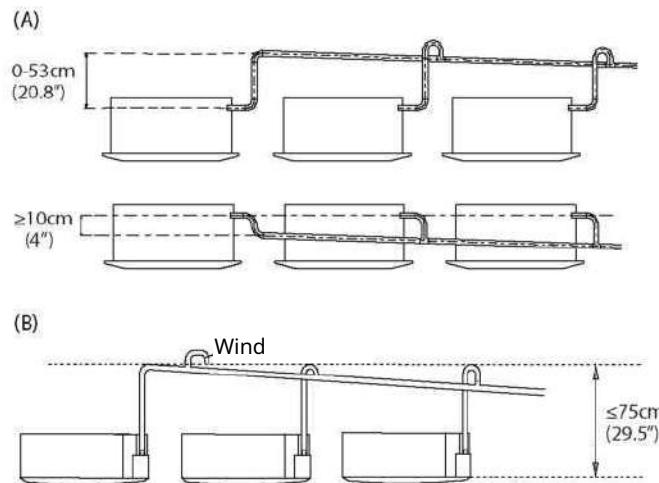


Pass the drain hose through the hole in the wall. Make sure the water drains to a safe place where it will not cause damage or slip hazards.

NOTE: The drain hose outlet must be at least 5 cm (1.9") above the ground. If it touches the ground, the unit may become blocked and not function properly. If discharging water directly into a sewer, make sure the drain has a U- or S-trap to capture odors that might otherwise re-enter the home.

(A)

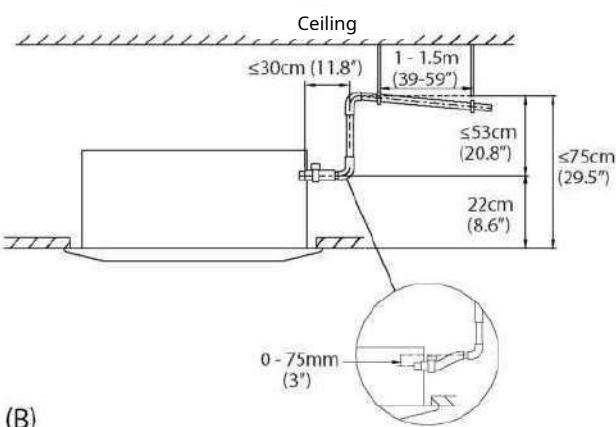


(B)

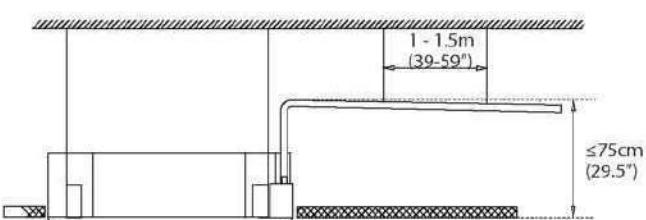

NOTE: When connecting multiple drain pipes, install the pipes as shown in the following figure.


How to install the duct installation plate (if supplied)

- Fix the sheath connector (not supplied) to the hole of the duct installation plate.
- Fix the duct installation plate to the unit frame.

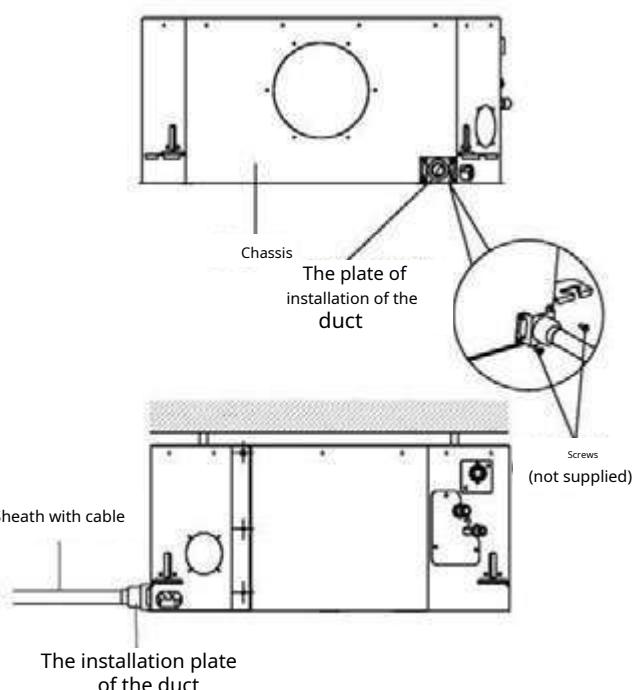

Installing the external unit

Install the unit following local codes and regulations, there may be slight differences between different regions.

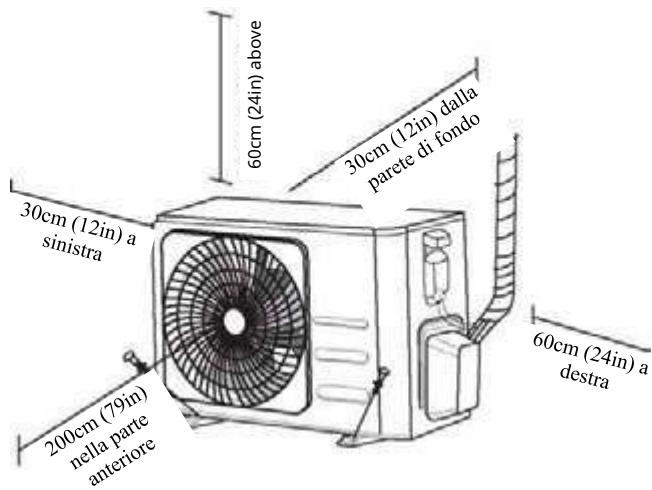

Installation Instructions - Outdoor Unit

Step 1: Select the installation location

Before installing the outdoor unit, you need to choose a suitable location. Below are the standards that will help you choose a suitable location for the unit.

Suitable installation locations meet the following standards:

- All space requirements listed in the previous "Space Requirements" section must be met.
- Good air circulation and ventilation Firm and solid position - the position must be able to support the unit without vibration
- The noise from the unit must not disturb neighbors.
- Protection from prolonged periods of direct sunlight or rain.
- In case of snow, place the unit on a base to prevent ice accumulation and damage to the coil. Mount the unit at a height that exceeds the average snowfall accumulation. The minimum height should be 18 inches


NOT Install the unit in the following locations:

- ∅ Near an obstacle that will block the air inlet and outlet
- ∅ Near a public road, in crowded areas or where the noise from the unit disturbs others
- ∅ Near animals or plants that will be harmed by the hot air outlet
- ∅ Near any source of combustible gas In a place exposed to large amounts of dust
- ∅ In a place exposed to excessive amounts of salty air

SPECIAL CONSIDERATIONS FOR EXTREME WEATHER

If the unit is exposed to strong wind:

Install the unit so that the air outlet fan is at a 90° angle to the wind direction. If necessary, build a barrier in front of the unit to protect it from extremely strong winds. See the figures below.

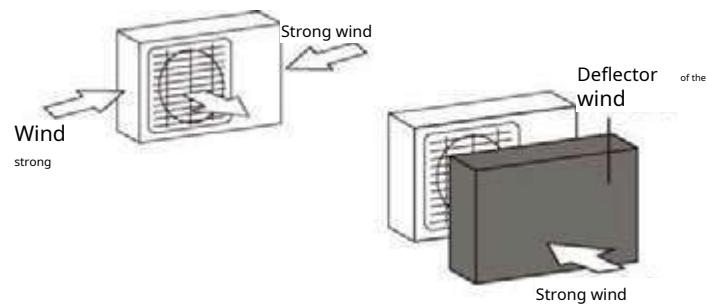

If the appliance is frequently exposed to heavy rain or snow:

Build a shelter over the unit to protect it from rain or snow. Be careful not to obstruct the airflow around the unit.

If the unit is frequently exposed to salt (sea) air:

Use an external unit specifically designed to resist corrosion.

Step 2: Install the drainage joint (only for heat pump units)

Before screwing the outdoor unit, it is necessary to install the drain joint on the bottom of the unit.


Please note that there are two different types of exhaust joints depending on the type of outdoor unit.

If the exhaust joint is equipped with a rubber gasket(you seeFig. A), proceed as follows:

1. Mount the rubber gasket at the end of the assembly that will connect to the outdoor unit.
2. Insert the drain joint into the hole in the base tray of the appliance.
3. Rotate the exhaust joint 90° until it snaps into place facing the front of the unit.
4. Connect a drain hose extension (not included) to the drain joint to redirect water from the unit during heating mode.

If the exhaust joint is not equipped with a rubber gasket(you seeFig. B), proceed as follows:

1. Insert the drain joint into the hole in the base tray of the appliance. The drain joint will click into place.
2. Connect a drain hose extension (not included) to the drain joint to redirect water from the unit during heating mode.

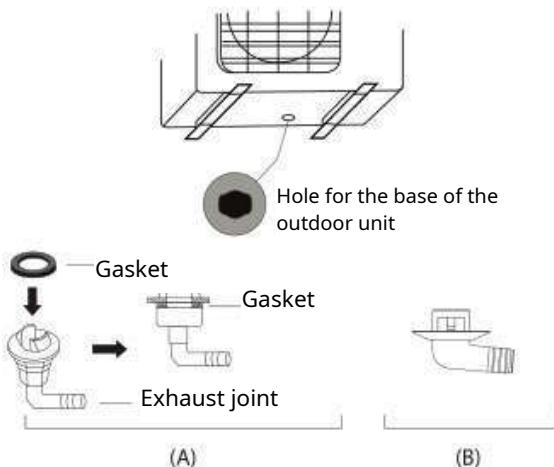

COLD CLIMATES

In cold climates, make sure the drain hose is as vertical as possible to ensure rapid water drainage.

If the water drains too slowly, it can freeze in the hose and flood the appliance.

Step 3: Anchoring the outdoor unit

The outdoor unit can be anchored to the ground or to a wall bracket with a bolt (M10). Prepare the installation base of the unit according to the following dimensions.

DIMENSIONS OF THE UNITY


FROM ASSEMBLY

Below is a list of the different sizes of external drives and the distance between their feet.

Prepare the installation base of the exhaust joint unit according to the following dimensions.

External Drive Types and Specifications

Split type external unit

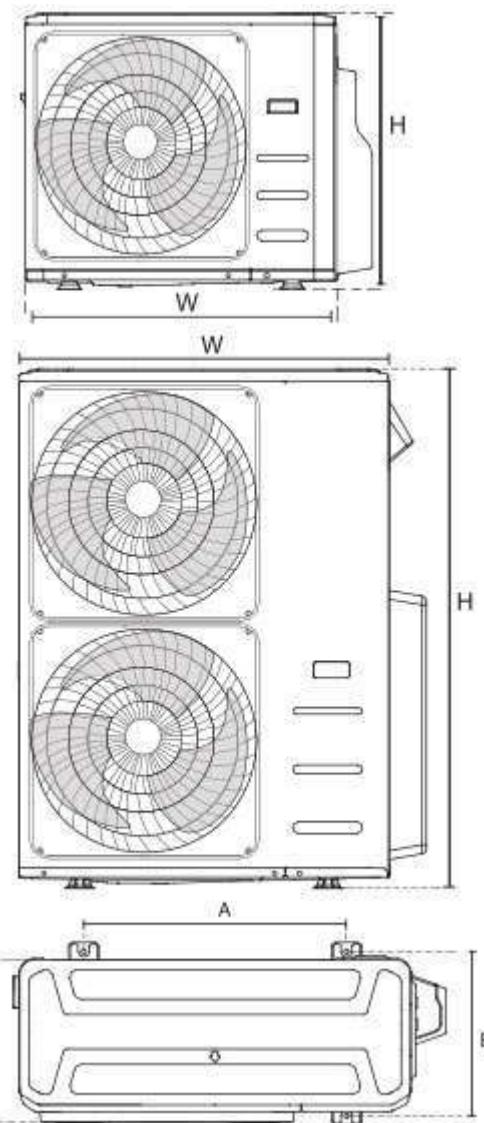


(unit: mm/inch)

Serial installation

| External unit dimensions L x A x P | Dimensions of assembly | |
|---------------------------------------|---------------------------|-------------|
| | Distance A | Distance B |
| 760x590x285 (29.9x23.2x11.2) | 530 (20.85) | 290 (11.4) |
| 810x558x310 (31.9x22x12.2) | 549 (21.6) | 325 (12.8) |
| 845x700x320 (33.27x27.5x12.6) | 560 (22) | 335 (13.2) |
| 900x860x315 (35.4x33.85x12.4) | 590 (23.2) | 333 (13.1) |
| 945x810x395 (37.2x31.9x15.55) | 640 (25.2) | 405 (15.95) |
| 990x965x345 (38.98x38x13.58) | 624 (24.58) | 366 (14.4) |
| 938x1369x392 (36.93x53.9x15.43) | 634 (24.96) | 404 (15.9) |
| 900x1170x350 (35.4x46x13.8) | 590 (23.2) | 378 (14.88) |
| 800x554x333 (31.5x21.8x13.1) | 514 (20.24) | 340 (13.39) |
| 845x702x363 (33.27x27.6x14.3) | 540 (21.26) | 350 (13.8) |
| 946x810x420 (37.24x31.9x16.53) | 673 (26.5) | 403 (15.87) |
| 946x810x410 (37.24x31.9x16.14) | 673 (26.5) | 403 (15.87) |
| 952x1333x410 (37.5x52.5x16.14) | 634 (24.96) | 404 (15.9) |
| 952x1333x415 (37.5x52.5x16.34) | 634 (24.96) | 404 (15.9) |
| 890x673x342 (35x26.5x13.46) | 663 (26.1) | 354 (13.94) |
| 765x555x303 (30.1x 21.8x 11.9) | 452 (17.8) | 286(11,3) |
| 805x554x330 (31.7x 21.8x 12.9) | 511 (20.1) | 317 (12.5) |

The relationships between H, A and L are as follows.

| | THE | TO |
|-------|---------------------|----------------------|
| L≤H | L≤1/2H | 25cm / 9.8" or more |
| | 1/2H<L≤H | 30cm / 11.8" or more |
| L > H | Cannot be installed | |

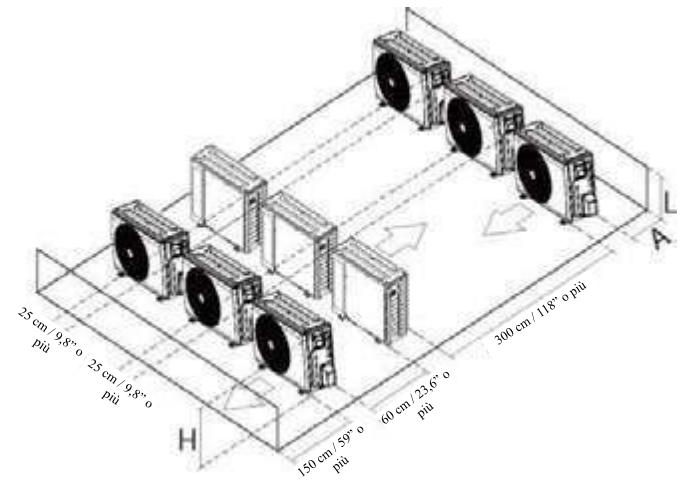

Connecting the refrigerant pipes

When connecting refrigerant pipes, **Not** Allowing substances or gases other than the specified refrigerant to enter the unit. The presence of other gases or substances will reduce the capacity of the unit and may cause abnormally high pressure in the refrigeration cycle. This may cause explosions and injury.

Note on tube length

Make sure that the length of the refrigerant pipe, the number of bends and the drop height between the indoor and outdoor units meet the requirements in the following table:

Maximum length and drop height by model (unit: m/ft.)

| Model type | Capacity (Btu/h) | Length of the Pipes | Maximum fall height |
|--|------------------|---------------------|---------------------|
| Conversions models related to North America, Australia and EU | <15K | 25/82 | 10/32,8 |
| | ≥15K - <24K | 30/98,4 | 20/65,6 |
| | ≥24K - <36K | 50/164 | 25/82 |
| | ≥36K - ≤60K | 75/246 | 30/98,4 |
| Other type of Split | 12K | 15/49 | 8/26 |
| | 18K-24K | 25/82 | 15/49 |
| | 30K-36K | 30/98,4 | 20/65,6 |
| | 42K-60K | 50/164 | 30/98,4 |



CAUTION


Oil trap

If oil flows back into the compressor of the outdoor unit, this may cause compression of the liquid or deterioration of the oil.

Oil traps in gas pipes with high elevations can prevent this.

An oil trap must be installed every 6m (20ft) of vertical rise in the suction line (Unit<36000Btu/h).

An oil trap must be installed every 10m (32.8ft) of vertical elevation of the suction line (Units ≥36000Btu/h).

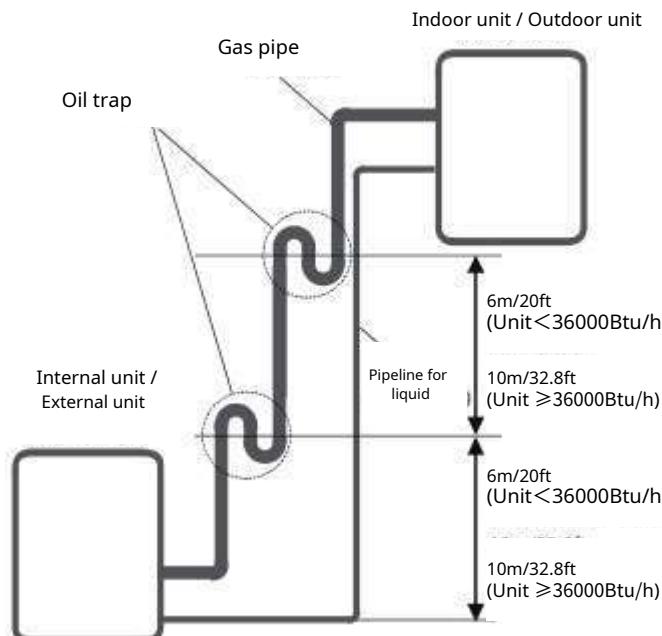

Connection Instructions - Refrigerant Pipes


CAUTION

- The branch pipe must be installed horizontally. An angle greater than 10° may cause malfunction.
- **NOT** Install the connecting pipe before installing both the indoor and outdoor units.
- Insulate both gas and liquid pipes to prevent water leakage.

Step 1: Cut the pipes

When preparing refrigerant lines, take special care to cut and flare them correctly. This will ensure efficient operation and minimize the need for future maintenance.

1. Measure the distance between the indoor and outdoor unit.
2. Using a pipe cutter, cut the pipe a little longer than the measured distance.
3. Make sure the tube is cut at a perfect 90° angle.

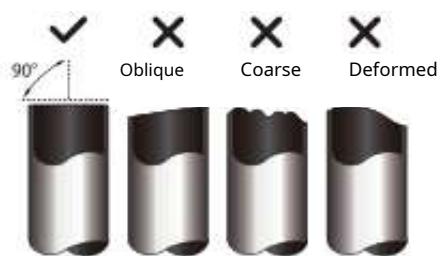


NOT DEFORMING THE PIPE DURING CUTTING

Be very careful not to damage, dent or deform the tube when cutting. This will drastically reduce the heating efficiency of the unit.

Step 2: Remove burrs.

Burrs can compromise the tightness of the refrigerant pipe connection. They must be completely removed.


1. Keep the tube facing down to prevent burrs from falling into the tube.
2. Using a reamer or deburr, remove all burrs from the cut section of pipe.

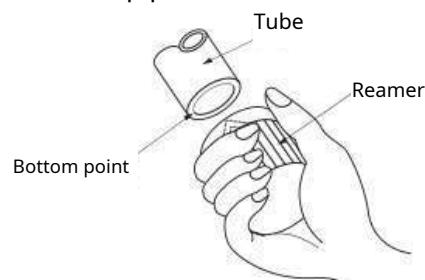


Step 3: Flaring the tube end

Proper flaring is essential to achieve a tight seal.

1. After removing the burrs from the cut pipe, seal the ends with PVC tape to prevent foreign materials from entering the pipe.
2. Cover the pipe with insulating material.
3. Place the flare nuts on both ends of the pipe. Make sure they are facing the right direction, because their direction cannot be changed after flaring.

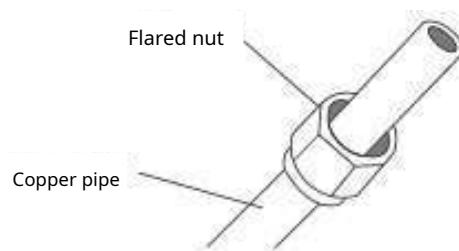

4. Remove the PVC tape from the ends of the pipe when you are ready to flare.
5. Place the clamp on the end of the tube. The end of the tube should extend beyond the clamp.

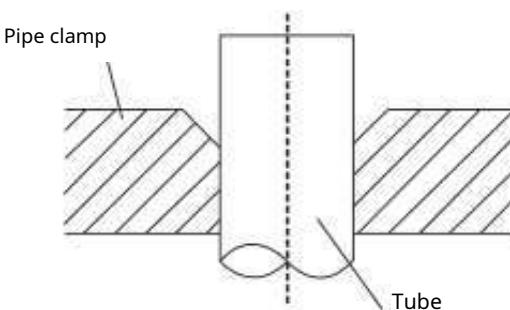

6. Place the countersink on the clamp.
7. Rotate the flare handle clockwise until the pipe is completely flared. Flare the pipe according to the dimensions.

EXTENSION OF PIPING BEYOND THE FLARING

| Meter for pipes | Pair of tightening | Size of the flare (A) (unit: mm/ Inches) | | Flared shape |
|--------------------|------------------------------|--|-----------|--------------|
| | | Min. | Max. | |
| Ø 6.35 | 18-20 Nm (183-204 kgf.cm) | 8.4/0.33 | 8.7/0.34 | |
| Ø 9,52 | 25-26 Nm (255-265 kgf.cm) | 13.2/0.52 | 13.5/0.53 | |
| Ø 12.7 | 35-36 Nm (357-367 kgf.cm) | 16.2/0.64 | 16.5/0.65 | |
| Ø 16 | 45-47 Nm (459-480 kgf.cm) | 19.2/0.76 | 19.7/0.78 | |
| Ø 19 | 65-67 Nm (663-683 kgf.cm) | 23.2/0.91 | 23.7/0.93 | |
| Ø 22 | 75-85 Nm (765-867 kgf.cm) | 26.4/1.04 | 26.9/1.06 | |


8. Remove the flare tool and clamp then inspect the pipe end for cracks and uneven flaring.

Step 4: Connect the pipes

Connect the copper pipe to the indoor unit first, then connect it to the outdoor unit. Connect the low pressure pipe first, then the high pressure pipe.

1. When connecting the flare nut, apply a thin layer of refrigerant oil to the flared ends of the pipes.


2. Align the center of the two pipes that will be connected.

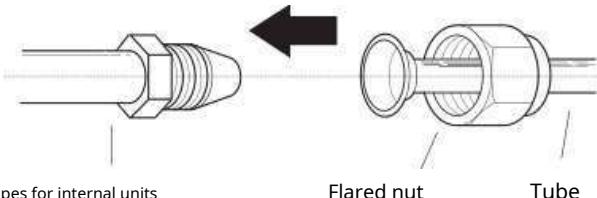

3. Tighten the flare nut as tightly as possible by hand.
4. Using a wrench, secure the nut onto the unit tube.

5. Use a torque wrench to tighten the flare nut to the torque values listed in the table above.

NOTE: Use both a wrench and a torque wrench when connecting or disconnecting the connecting hose to/from the unit.

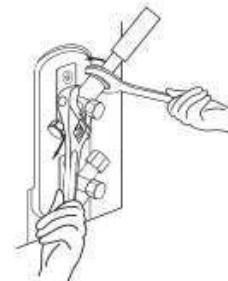


CAUTION

- Be sure to wrap insulation around the pipes. Direct contact with bare pipes can cause burns or frostbite.
- Make sure the hose is connected properly. Over-tightening can damage the flare edge and under-tightening can cause leaks.

NOTE ON MINIMUM CURVATURE RADIUS

Carefully bend the tube in the center according to the following diagram. **NOT** bend the pipe more than 90° or more than 3 times.

Bend the tube with your thumb

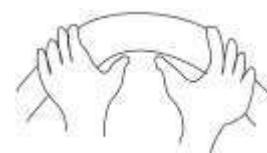

minimum radius 10cm (3.9")

6. After connecting the copper pipe to the indoor unit, wrap the power cable, signal cable and piping with protective tape.

NOTE: **NOT** Twist the signal cable with other cables. When bundling these items, do not twist or cross the signal cable with other cables.


7. Thread this pipe through the wall and connect it to the outdoor unit.
8. Isolate all piping, including the outdoor unit valves.
9. Open the shut-off valves on the outdoor unit to start the refrigerant flow between the indoor unit and the outdoor unit.



CAUTION


Check for refrigerant leaks after completing installation work. If refrigerant leaks, ventilate the area immediately and evacuate the system (refer to the Air Evacuation section of this manual).

Installing the throttle valve. (Some models)

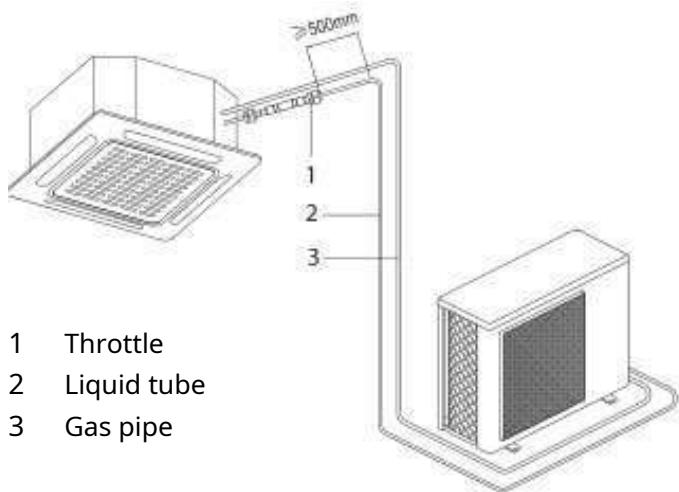


Precautions

- To ensure the efficiency of the butterfly valve, mount it as horizontally as possible.

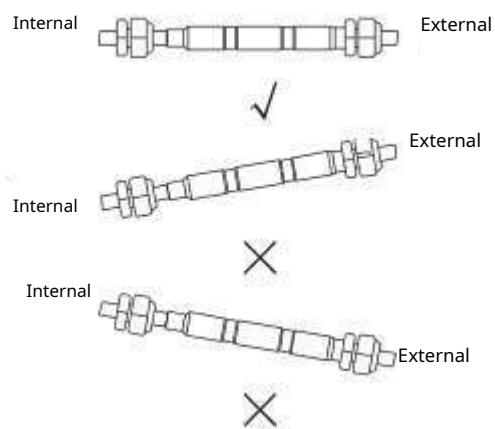

- Wrap the supplied shock absorbing rubber around the outside of the throttle valve.

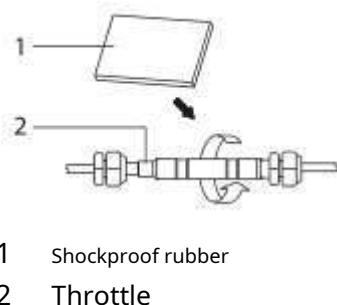

Wiring

BEFORE CARRYING OUT ANY ELECTRICAL WORK, READ THE FOLLOWING RULES

1. All wiring must comply with local and national electrical codes and regulations and must be installed by a licensed electrician.
2. All electrical connections must be made according to the Electrical Connection Diagram located on the indoor and outdoor unit panels.
3. In case of serious safety problems with the power supply electric, stop work immediately. Explain the reasons to the customer and refuse to install the unit until the safety issue has been properly resolved.
4. The power supply voltage should be within 90-110% of the rated voltage. Insufficient power supply may cause malfunction, electric shock or fire.
5. If you connect the power supply directly to the mains, you must install a surge protector and a mains switch.
6. If the power supply is connected directly to the mains, a switch must be incorporated which disconnects all poles and has a contact separation of at least 1/8 in (3mm). The qualified technician must use an approved switch.
7. Connect the unit only to a single outlet on the branch circuit. Do not connect another appliance to that outlet.
8. Be sure to ground the air conditioner properly.
9. Each cable must be firmly connected. Loose wiring may cause the terminal to overheat, resulting in product malfunction and possible fire.
10. Do not let cords touch or rest against refrigerant pipes, compressor, or any moving parts inside the unit.
11. If the unit is equipped with an auxiliary electric heater, it must be installed at least 1 metre (40 in) away from any combustible materials.
12. To avoid receiving an electric shock, never touch electrical components immediately after turning off the power. After turning off the power, always wait 10 minutes or more before touching electrical components.

13. Make sure not to cross the electrical wiring with the signal wiring. This can cause distortion and interference.
14. The unit must be connected to the mains socket. Normally, the power supply must have an impedance of 32 ohms.
15. No other appliance should be connected to the same supply circuit.
16. Connect external cables before connecting internal cables

ATTENTION


BEFORE PERFORMING ANY ELECTRICAL OR WIRING WORK, TURN OFF THE MAIN POWER TO THE SYSTEM.




NOTE ON THE AIR CONDITIONER SWITCH

If the maximum current of the air conditioner is more than 16A, a leakage protection switch with protective device (purchased separately) must be used.

If the maximum current of the air conditioner is less than 16A, the power cord of the air conditioner must be equipped with a plug (purchased separately).

In North America, the device must be wired according to NEC and CEC requirements.

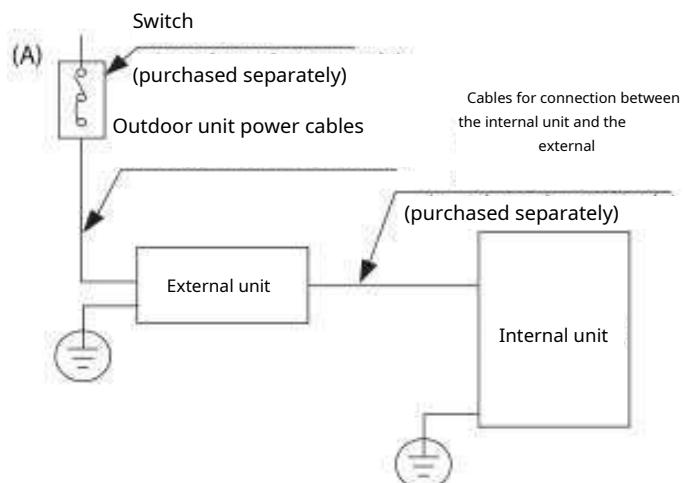

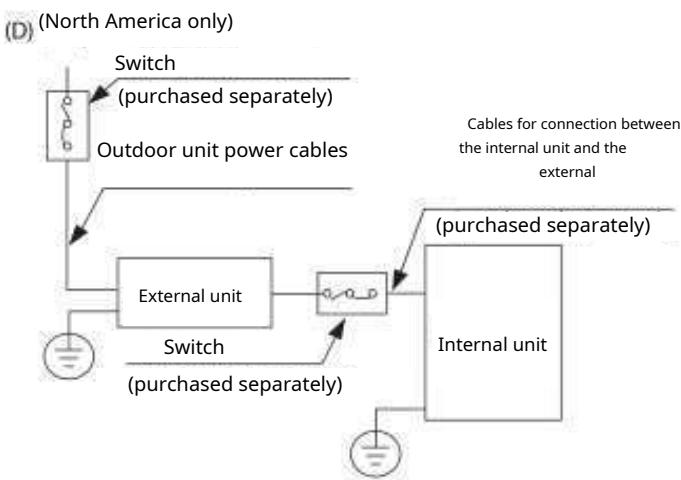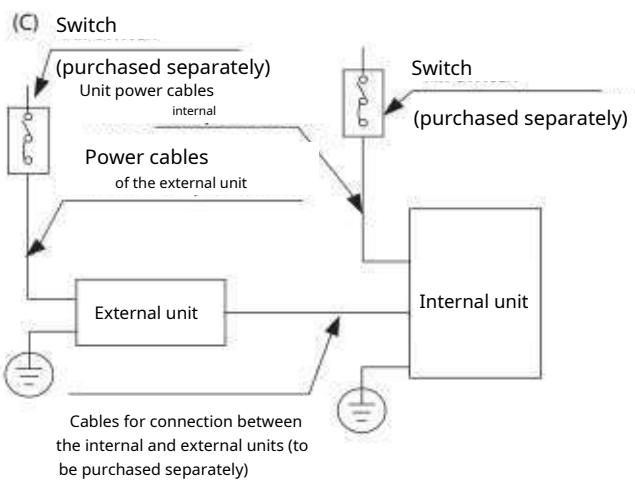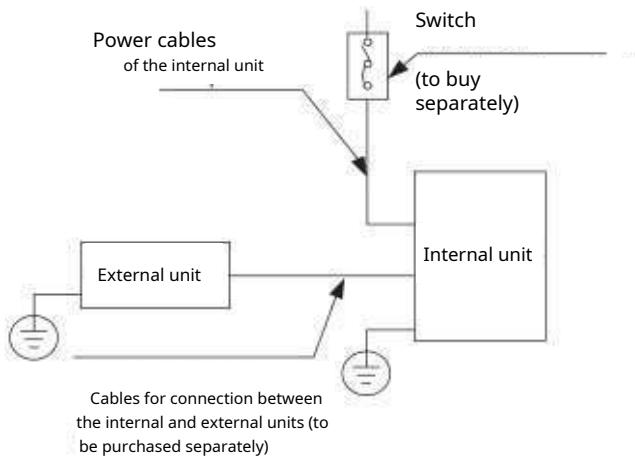

NOTE: The pictures are for explanation purposes only. Your machine may be slightly different. The actual shape shall prevail.

Wiring the outdoor unit

ATTENTION

Before performing any electrical or wiring work, turn off the main power to the system.

1. Prepare the cable for connection

a. You must first choose the right size of cable.

Make sure you use H07RN-F cables.

NOTE: In North America, choose the cable type according to local electrical codes and regulations.

Minimum cross-sectional area of power and signal cables (for reference)

| Rated current of the appliance (A) | Nominal surface area transversal (mm ²) |
|------------------------------------|---|
| > 3 and ≤ 6 | 0.75 |
| > 6 and ≤ 10 | 1 |
| > 10 and ≤ 16 | 1.5 |
| > 16 and ≤ 25 | 2.5 |
| > 25 and ≤ 32 | 4 |
| > 32 and ≤ 40 | 6 |

CHOOSING THE RIGHT CABLE SIZE


The size of the power cord, signal cable, fuse and circuit breaker required is determined by the maximum current of the unit. The maximum current is indicated on the nameplate located on the side panel of the unit. Refer to this nameplate to select the correct cord, fuse or circuit breaker.

NOTE: In North America, select the correct cord size based on the minimum circuit amperage rating indicated on the unit's nameplate.


- Using wire strippers, strip the rubber sheath from both ends of the signal cable to expose approximately 15 cm (5.9") of cable.
- Strip the insulation at the ends.
- Using a cable crimper, crimp the U-shaped cable covers onto the ends.

NOTE: When connecting the wires, carefully follow the wiring diagram located inside the electrical box cover.


2. Remove the electrical cover of the outdoor unit. If there is no cover on the outdoor unit, remove the bolts from the maintenance board and remove the protection board.

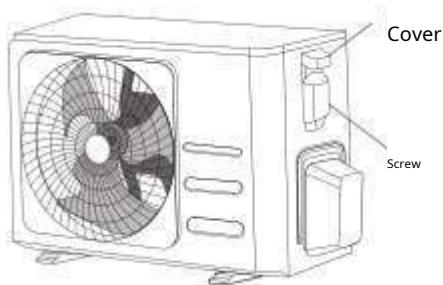

Super-fine models

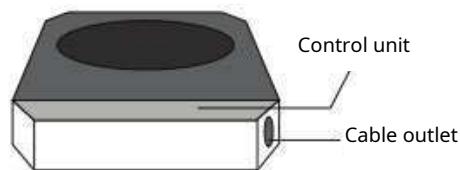

Control unit

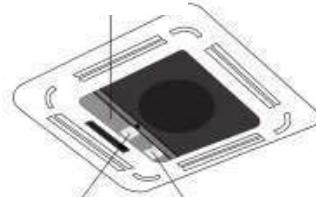

Electrical diagram


Connection diagram

3. Connect the U-shaped wire covers to the terminals. Match the wire colors/labels with the labels on the terminal block. Screw each wire U-shaped wire cover tightly to the corresponding terminal.
4. Secure the cable with the cable clamp.
5. Insulate unused wires with electrical tape. Keep them away from electrical or metal parts.
6. Refit the control unit cover.



Wiring the indoor unit

1. Prepare the cable for connection
 - a. Using wire strippers, strip the rubber sheath from both ends of the signal cable to expose approximately 15 cm (5.9") of cable.
 - b. Strip the insulation at the ends of the cables.
 - c. Using a cable crimper, crimp the U-shaped cable covers onto the ends.
2. Open the front panel of the indoor unit. Using a screwdriver, remove the cover of the electrical control box of the indoor unit.
3. Pass the power cable and signal cable through the cable outlet.
4. Connect the U-shaped cable covers to the terminals. Match the wire colors/labels with the labels on the terminal block. Screw the U-shaped cable cover of each wire securely to the corresponding terminal. Refer to the serial number and wiring diagram located on the cover of the electrical control box.

Magnetic ring(if supplied and packaged with accessories)

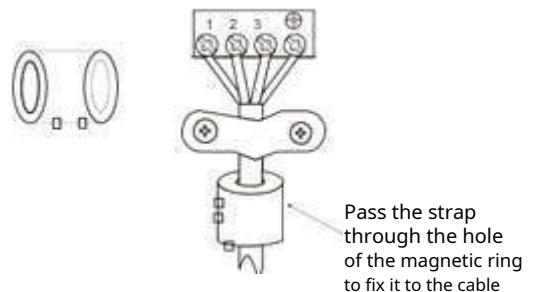

Compact models

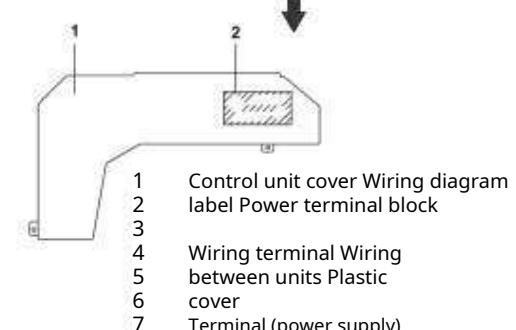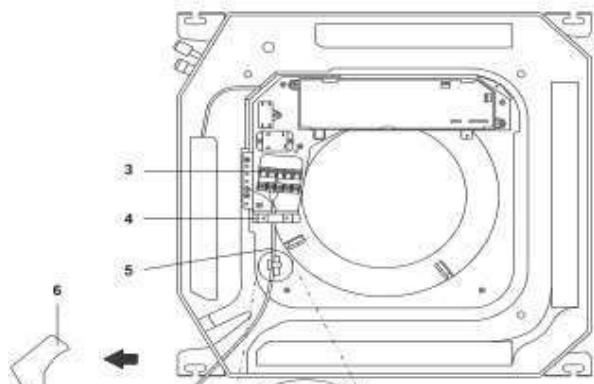



CAUTION

- When connecting the cables, carefully follow the wiring diagram.
- The refrigerant circuit can become very hot. Keep the interconnecting cable away from the copper pipe.

5. The cable must not be loosened or pulled on the U-connectors.

6. Reassemble the cover of the electrical control unit.

Power Specifications (not applicable for North America)

NOTE: The circuit breaker/fuse for models with auxiliary electric heating must be greater than 10 A.

Internal Power Specifications

| MODEL (Btu/h) | | ≤18K | 19K~24K | 25K~36K | 37K~48K | 49K~60K |
|-----------------------------|-------|----------|----------|----------|----------|----------|
| POWER | PHASE | 1 Phase | 1 Phase | 1 Phase | 1 Phase | 1 Phase |
| | VOLT | 208-240V | 208-240V | 208-240V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 25/20 | 32/25 | 50/40 | 70/55 | 70/60 |

| MODEL (Btu/h) | | ≤36K | 37K~60K | ≤36K | 37K~60K |
|-----------------------------|-------|----------|----------|----------|----------|
| POWER | PHASE | 3 Phases | 3 Phases | 3 Phases | 3 Phases |
| | VOLT | 380-420V | 380-420V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 25/20 | 32/25 | 32/25 | 45/35 |

External Power Specifications

| MODEL (Btu/h) | | ≤18K | 19K~24K | 25K~36K | 37K~48K | 49K~60K |
|-----------------------------|-------|----------|----------|----------|----------|----------|
| POWER | PHASE | 1 Phase | 1 Phase | 1 Phase | 1 Phase | 1 Phase |
| | VOLT | 208-240V | 208-240V | 208-240V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 25/20 | 32/25 | 50/40 | 70/55 | 70/60 |

| MODEL (Btu/h) | | ≤36K | 37K~60K | ≤36K | 37K~60K |
|-----------------------------|-------|----------|----------|----------|----------|
| POWER | PHASE | 3 Phases | 3 Phases | 3 Phases | 3 Phases |
| | VOLT | 380-420V | 380-420V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 25/20 | 32/25 | 32/25 | 45/35 |

Independent power supply specifications

| MODEL (Btu/h) | | ≤18K | 19K~24K | 25K~36K | 37K~48K | 49K~60K |
|-----------------------------|-------|----------|----------|----------|----------|----------|
| POWER (internal) | PHASE | 1 Phase | 1 Phase | 1 Phase | 1 Phase | 1 Phase |
| | VOLT | 208-240V | 208-240V | 208-240V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 15/10 | 15/10 | 15/10 | 15/10 | 15/10 |
| POWER (external) | PHASE | 1 Phase | 1 Phase | 1 Phase | 1 Phase | 1 Phase |
| | VOLT | 208-240V | 208-240V | 208-240V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 25/20 | 32/25 | 50/40 | 70/55 | 70/60 |

| MODEL (Btu/h) | | ≤36K | 37K~60K | ≤36K | 37K~60K |
|-----------------------------|-------|----------|----------|----------|----------|
| POWER (internal) | PHASE | 1 Phase | 1 Phase | 1 Phase | 1 Phase |
| | VOLT | 208-240V | 208-240V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 15/10 | 15/10 | 15/10 | 15/10 |
| POWER (external) | PHASE | 3 Phases | 3 Phases | 3 Phases | 3 Phases |
| | VOLT | 380-420V | 380-420V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 25/20 | 32/25 | 32/25 | 45/35 |

A/C inverter power supply specifications

| MODEL (Btu/h) | | ≤18K | 19K~24K | 25K~36K | 37K~48K | 49K~60K |
|-----------------------------|-------|----------|----------|----------|----------|----------|
| POWER (internal) | PHASE | 1 Phase | 1 Phase | 1 Phase | 1 Phase | 1 Phase |
| | VOLT | 220-240V | 220-240V | 220-240V | 220-240V | 220-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 15/10 | 15/10 | 15/10 | 15/10 | 15/10 |
| POWER (external) | PHASE | 1 Phase | 1 Phase | 1 Phase | 1 Phase | 1 Phase |
| | VOLT | 208-240V | 208-240V | 208-240V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 25/20 | 25/20 | 40/30 | 50/40 | 50/40 |

| MODEL (Btu/h) | | ≤36K | 37K~60K | ≤36K | 37K~60K |
|-----------------------------|-------|----------|----------|----------|----------|
| POWER (internal) | PHASE | 1 Phase | 1 Phase | 1 Phase | 1 Phase |
| | VOLT | 220-240V | 220-240V | 220-240V | 220-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 15/10 | 15/10 | 15/10 | 15/10 |
| POWER (external) | PHASE | 3 Phases | 3 Phases | 3 Phases | 3 Phases |
| | VOLT | 380-420V | 380-420V | 208-240V | 208-240V |
| SWITCH AUTOMATIC/FUSE(A) | | 25/20 | 32/25 | 32/25 | 40/30 |

Air evacuation

Preparations and precautions

Air and foreign bodies in the refrigerant circuit can

cause abnormal pressure increases, which can damage the air conditioner, reduce its efficiency and

cause injury. Use a vacuum pump and manifold gauge to evacuate the refrigerant circuit, removing any non-condensable gases and moisture from the system.


Evacuation must be performed upon initial installation and when the unit is moved.

BEFORE CARRYING OUT THE EVACUATION

- Check that the connecting pipes between the indoor and outdoor units are connected correctly.
- Check that all cables are connected correctly.

Evacuation instructions

1. Connect the charging hose of the manifold pressure gauge to the service port on the low pressure valve of the outdoor unit.
2. Connect another hose from the manifold gauge to the vacuum pump.
3. Open the low pressure side of the manifold gauge. Keep the high pressure side closed.
4. Turn on the vacuum pump to evacuate the system.
5. Run the vacuum for at least 15 minutes, or until the watertight display indicates -76cmHG (-105Pa).

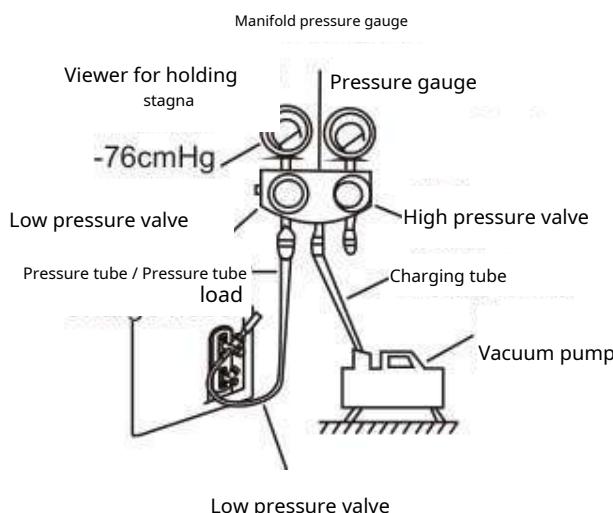


6. Close the low pressure side of the manifold gauge, and turn off the vacuum pump.

8. If there is a change in system pressure, see the Gas Leak Check section for information on how to check for leaks. If there is no change in system pressure, unscrew the cap.

9. from the sealed valve (high pressure valve). Insert the hex key into the sealed valve (high pressure valve) and open the valve by turning the key 1/4 counterclockwise. You will hear the sound of gas entering the circuit; close the valve after 5 seconds.

10. Observe the pressure gauge for one minute to ensure that there are no changes in pressure. The pressure gauge should read slightly higher than atmospheric pressure.

11. Remove the charging hose from the service port.

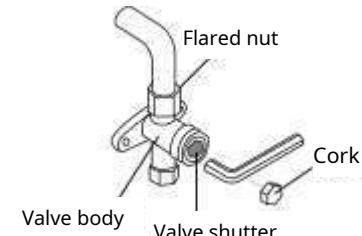

12. Using a hex wrench, fully open both the high pressure and low pressure valves.

13. Hand tighten the valve caps on all three valves (service, high pressure, low pressure). If necessary, you can tighten them further with a torque wrench.



**OPEN GENTLY
THE VALVE SHUTTER**

When unscrewing the valve plug, turn the hex key until it stops against the edge. Do not try to force the valve open further.

Note on adding coolant

Some systems require additional charging depending on the length of the hoses. The standard hose length varies based on local regulations. For example, in North America, the standard hose length is 25' (7.5 m).

In other areas, the standard pipe length is 5m (16'). Refrigerant should be charged from the service port on the low pressure valve of the outdoor unit. The additional refrigerant to be charged can be calculated with the following formula:

Liquid side diameter

| | φ6.35(1/4") | φ9.52(3/8") | φ12.7(1/2") |
|---|--|--|---|
| R22 (Expansion valve in the internal unit): | (Total length of the tube - standard tube length) x 30g (0.32oZ)/m(ft) | (Total length of the tube - standard length of the tube) x 65g(0.69oZ)/m(ft) | (Length total of the tube - standard length of the tube) x 115g(1.23oZ)/m(ft) |
| R22 (Expansion valve in the external unit): | (Total length of the tube - standard tube length) x15g(0.16oZ)/m(ft) | (Total length of the tube - standard length of the tube) x30(0.32oZ)/m(ft) | (Total length of the tube - standard length of the tube) x60g(0.64oZ)/m(ft) |
| R410A: (Expansion valve in the internal unit): | (Total length of the tube - standard tube length) x30g(0.32oZ)/m(ft) | (Total length of the tube - standard length of the tube) x65g(0.69oZ)/m(ft) | (Total length of the tube - standard length of the tube) x115g(1.23oZ)/m(ft) |
| R410A: (Expansion valve in the external unit): | (Total length of the tube - standard tube length) x15g(0.16oZ)/m(ft) | (Total length of the tube - standard length of the tube) x30g(0.32oZ)/m(ft) | (Total length of the tube - standard length of the tube) x65g(0.69oZ)/m(ft) |
| R32: | (Total length of the tube - standard tube length) x 12g(0.13oZ)/m(ft) | (Total length of the tube - standard length of the tube) x 24g(0.26oZ)/m(ft) | (Total length of the tube - standard length of the tube) x 40g(0.42oZ)/m(ft) |



CAUTION NOT mix types of refrigerant.

Panel Installation



CAUTION


NOT Place the panel face down on the floor, against a wall, or on uneven surfaces.

(TO)


Super-fine models

Step 1: Remove the front grille.

1. Push both tabs toward the center at the same time to unlock the hook on the grill.
2. Hold the grill at a 45° angle, lift it slightly and detach it from the main body.

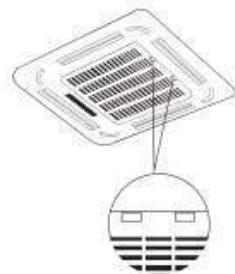

Step 2: Remove the mounting covers at the four corners by sliding them outwards.

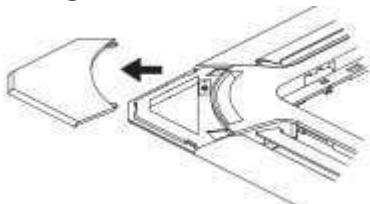


Step 3: Install the panel


Align the front panel on the main body, taking into account the position of the pipes and the drain sides. Hang the four protection panel locks on the hooks of the indoor unit. Tighten the panel hook screws evenly at the four corners.

NOTE: Tighten the screws until the thickness of the sponge between the main body and the panel is reduced to 4-6 mm (0.2-0.3"). The edge of the panel should be in contact with the false ceiling well.

Adjust the panel by rotating it in the direction of the arrow so that the ceiling opening is completely covered.

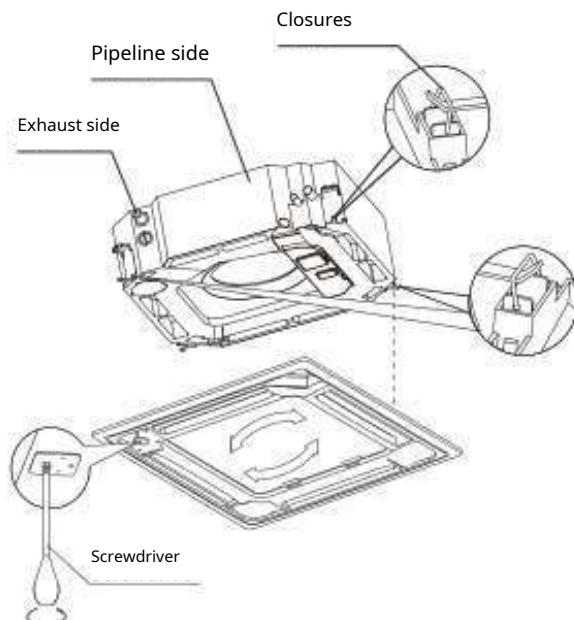


1. Connect the two connectors of the shutter motor to the corresponding cables in the control unit.

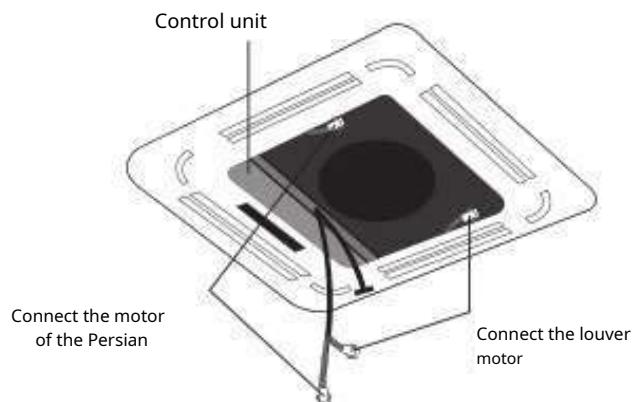


2. Remove sponge stops from inside fan.
3. Attach the side of the front grille to the panel.
4. Connect the display panel cable to the corresponding cable on the main body.
5. Close the front grille.
6. Attach the mounting covers to the four corners by pushing them inwards.

NOTE: If the height of the indoor unit needs to be adjusted, this can be done through the openings at the four corners of the panel. Make sure that the internal wiring and drainage pipe are not damaged by this adjustment.

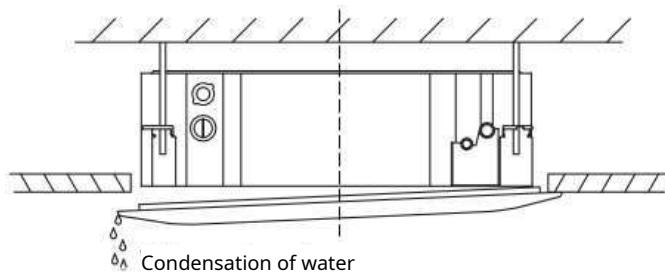

CAUTION

Failure to tighten the screws may cause water leaks.

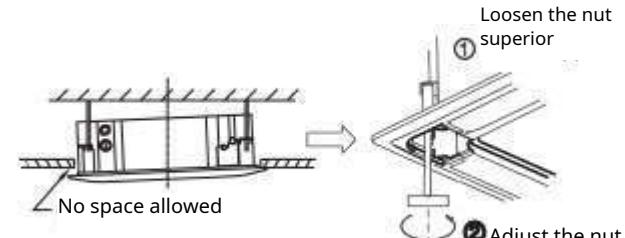

CAUTION

If the appliance is not hung properly with a gap, the height of the appliance must be adjusted to ensure proper operation. The height of the unit can be adjusted by loosening the top nut and adjusting the bottom nut.

of the **Compact models**

Step 1: Remove the front grille.

1. Push both tabs toward the center at the same time to unlock the hook on the grill.




2. Hold the grill at a 45° angle, lift it slightly and detach it from the main body.


Step 2: Install the panel

Align the indication "△" on the protection panel with the indication "△" on the unit.

Secure the cover panel to the unit with the supplied screws as shown in the figure below.

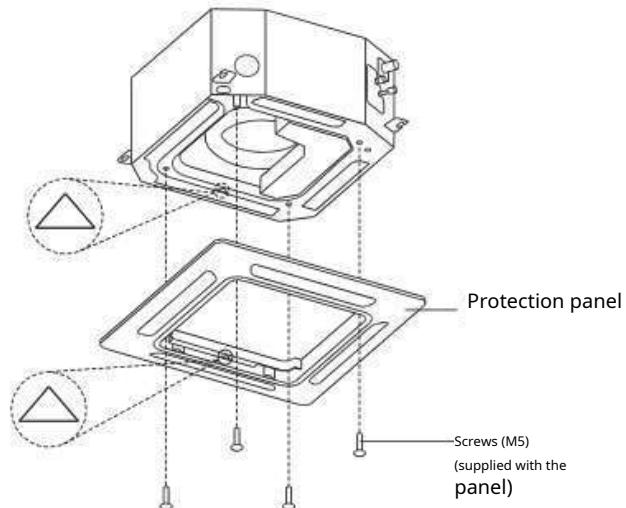

After installing the protective panel, make sure there is no gap between the unit body and the panel. Otherwise, air may leak through the gap and cause dripping. (See figure below)

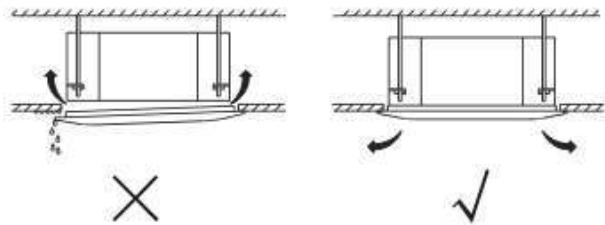

Step 3: Mount the intake grille.

Make sure the buckles on the back of the grille are positioned correctly in the groove of the panel.




(B)


Step 1: Remove the front grille.

1. Push both tabs toward the center at the same time to unlock the hook on the grill.


2. Hold the grill at a 45° angle, lift it slightly and detach it from the main body.

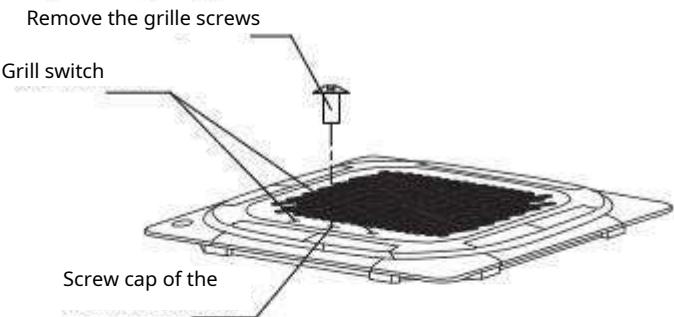


Step 4: Connect the 2 protection panel cables to the unit motherboard.

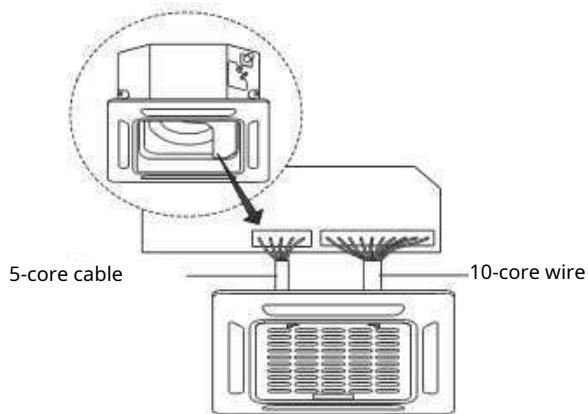

Step 5: Fix the control box cover with 2 screws.

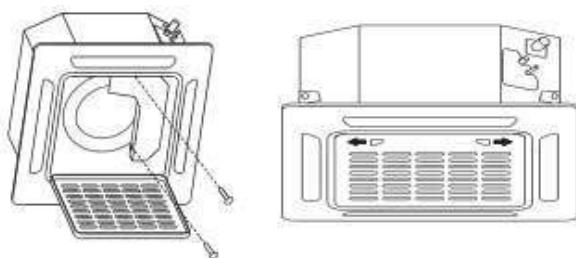

Step 6: Close the intake grille and close the 2 grill hooks.

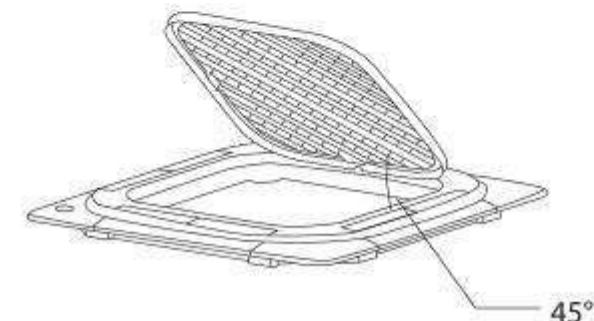

Step 2: Remove the mounting covers at the four corners by sliding them outwards.




Step 3: Install the panel


Align the front panel on the main body, taking into account the position of the pipes and the drain sides. Hang the four protection panel locks on the hooks of the indoor unit. Tighten the panel hook screws evenly at the four corners.

NOTE: Tighten the screws until the thickness of the sponge between the main body and the panel is reduced to 4-6 mm (0.2-0.3"). The edge of the panel should be in contact with the false ceiling well.

Adjust the panel by rotating it in the direction of the arrow so that the ceiling opening is completely covered.

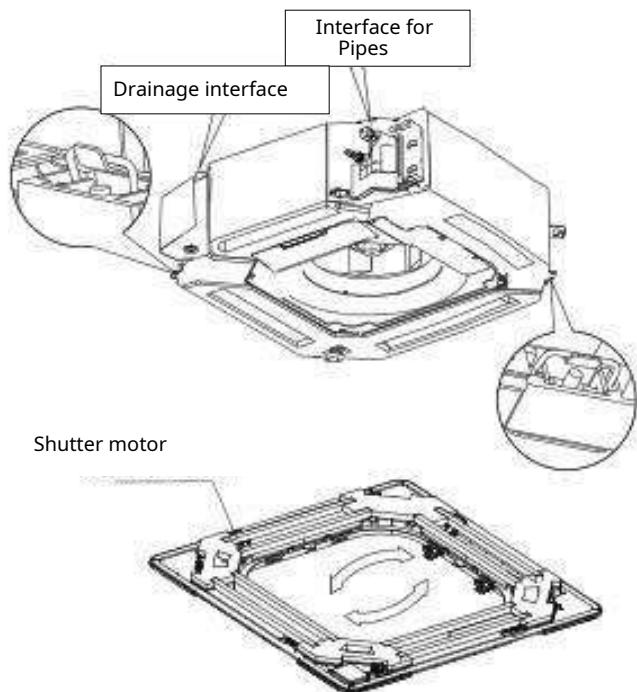


NOTE: If the height of the indoor unit needs to be adjusted, this can be done through the openings at the four corners of the panel. Make sure that the internal wiring and drain pipe are not affected by this adjustment.

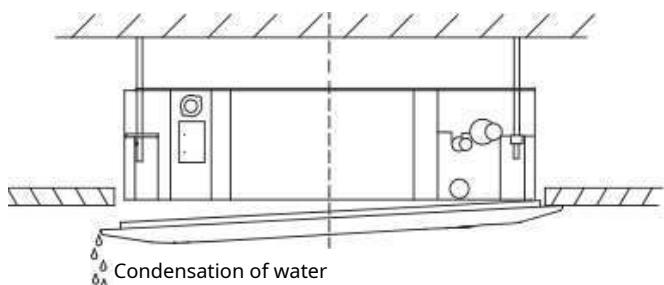


CAUTION

Failure to tighten the screws may cause water leaks.

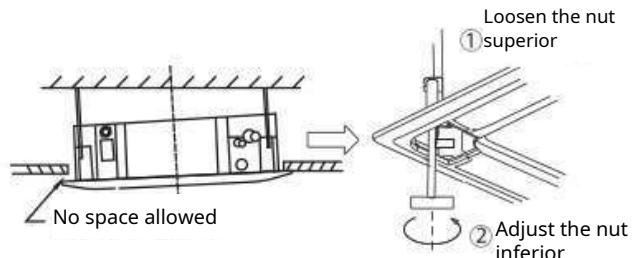


CAUTION

If the appliance is not hung properly with a gap, the height of the appliance must be adjusted to ensure proper operation. The height of the unit can be adjusted by loosening the top nut and adjusting the bottom nut.

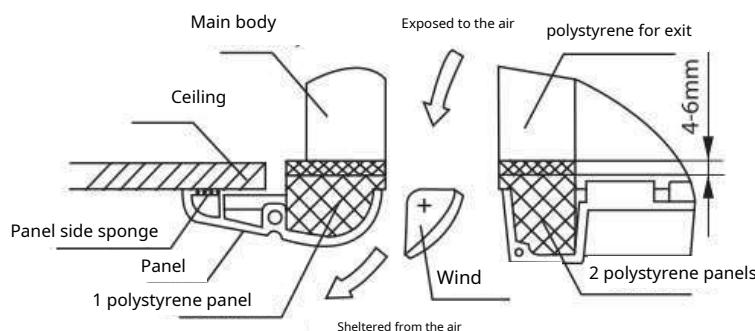


Hang the intake grille on the panel, then connect the wire connectors of the shutter motor and control box on the panel to the corresponding connectors on the main body.

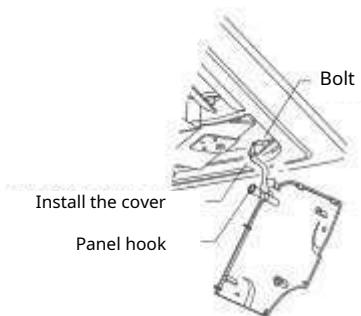

Re-installed into the grill. Re-install the installation cover.

Attach the installation cover plate cord to the installation cover plate pillar and gently press the installation cover plate into the panel.

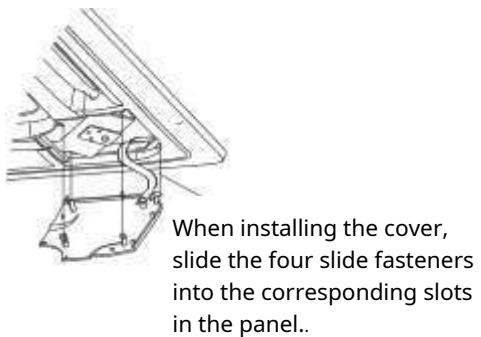

NOTE: After installation, the connectors of the display, shutter, water pump and other cables should be placed in the electrical control box.

Running the test

Before running the test

A test should be performed after the entire system has been fully installed. Confirm the following points before performing the test:

- a) The indoor and outdoor units are installed correctly.
- unit
- b) The pipes and wiring are connected correctly.
- c) No obstacles near the inlet and outlet of the unit that may cause poor performance or malfunction of the product.
- d) The refrigeration system is not leaking.
- e) The drainage system is unobstructed and discharges to a safe location.
- f) Thermal insulation is installed correctly.
- g) The ground wires are connected correctly.
- h) The length of the pipes and the amount of refrigerant added were recorded.
- i) The supply voltage is the correct voltage for the air conditioner.



CAUTION

Failure to perform the test may result in damage to the unit, property damage, or personal injury.

Instructions for performing the test

1. Open both the liquid and gas shut-off valves.
2. Turn on the main power switch and allow the unit to warm up.
3. Set the air conditioner to COOL mode.
4. For the indoor unit
 - a. Make sure the remote control and its buttons work properly.
 - b. Make sure that the shutters move correctly and can be directed with the remote control.
 - c. Check whether the room temperature is displayed correctly.
 - d. Make sure that the indicators on the remote control and the display panel of the indoor unit are working properly.
 - e. Make sure the manual button on the indoor unit works properly.

f. Check that the drainage system is free of obstructions and that drainage occurs without problems.

g. Make sure there is no abnormal vibration or noise during operation.

5. For the outdoor

a. Check the refrigeration system for leaks.

b. Make sure there is no abnormal vibration or noise during operation.

c. Ensure that the airflow, noise and water generated by the unit do not disturb neighbors or pose a safety hazard.

6. Drainage test

a. Make sure the drain pipe drains freely. New buildings should perform this test before finalizing the suspended ceiling installation.

b. Remove the service lid. Add 2,000 ml of water to the tank through the connected hose.

c. Turn on the main switch and operate the air conditioner in COOL mode.

d. Listen to the sound of the drain pump to see if it makes any unusual noises.

e. Check that the water is draining. It may take up to a minute for the unit to begin draining depending on the drain hose.

f. Make sure there are no leaks in any of the pipes.

g. Stop the air conditioner. Turn off and replace the service cover.

NOTE: If the unit malfunctions or does not perform as expected, please refer to the Troubleshooting section of the user manual before calling customer service.

**Design and specifications are subject to change without notice for product improvement.
Consult your dealer or manufacturer for details. Any updates to the manual will be
uploaded to the supplier's website, please check the latest version.**

AIR CONDITIONER

REMOTE CONTROL USER MANUAL


Warning: batteries not supplied

SUMMARY

| | |
|--|----|
| 1. Remote control management..... | 3 |
| 2. Features of the remote control..... | 5 |
| 3. Display indicators..... | 8 |
| 4. AUTO operation..... | 9 |
| 5. MODE Operation..... | 10 |
| 6. DRY dehumidification mode..... | 11 |
| 7. TIMER operation..... | 12 |
| 8. NIGHT-TIME operation..... | 15 |
| 9. Lock button (LOCK) and RESET..... | 15 |
| 10. Air flow function button..... | 16 |
| 11. Precautions..... | 16 |

Remote control management

REMOTE CONTROL POSITION

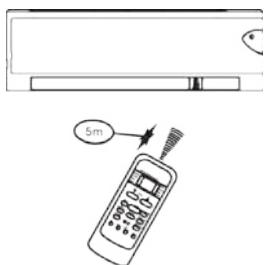


Hold the remote control where the infrared signal can reach the receiver of the indoor unit.

A maximum distance of 5 metres is permitted in open fields.

Precautions

- The air conditioner will not operate if curtains, doors or other materials block the indoor unit from receiving the remote control signal.
- Prevent any liquid from accidentally falling on the remote control.
- Do not expose the remote control to direct sunlight or heat sources.
- If the infrared signal receiver on the indoor unit is exposed to direct sunlight, the air conditioner may not operate properly.
- If other electrical appliances react to the remote control, you should move these appliances or contact your local dealer.

INSERTING THE REMOTE CONTROL BATTERIES

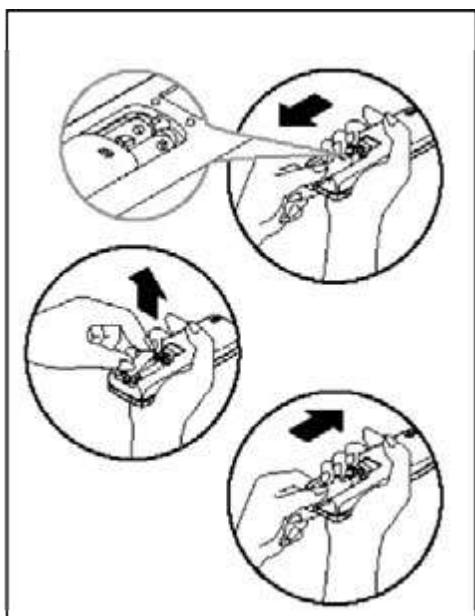

(1) Two alkaline batteries (R03/LR03 x 2) are required for the remote control.

(2) Press the arrow printed on the cover behind the remote control and open it by sliding the cover in the direction of the arrow.


(3) Insert the two batteries, checking the correct polarity.

(4) Replace the door by sliding it upwards until you hear the characteristic click.

NOTE:

- Use only new batteries. Remove the batteries if the unit is not to be used for a long time.

REPLACING THE REMOTE CONTROL BATTERIES

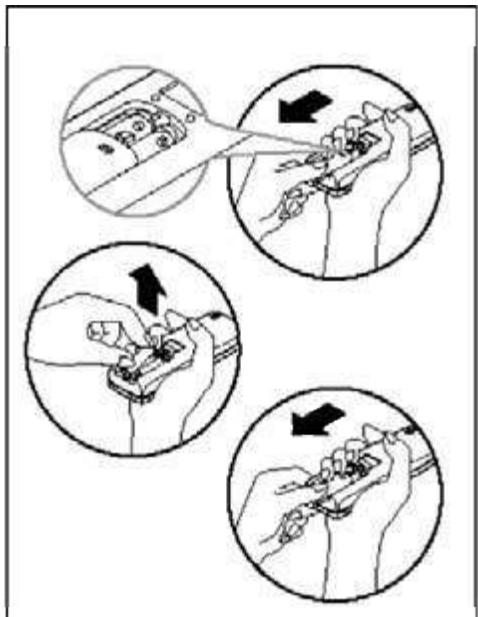

- (1) If the remote control display does not work, the remote control batteries need to be replaced.
- (2) Two alkaline batteries (R03/LR03 x 2) are required for the remote control.
- (3) Slide the battery compartment cover on the back of the remote control in the direction of the arrow.
- (4) Insert two batteries and check that the poles+And-are positioned correctly.
- (5) Replace the door by sliding it upwards until you hear the characteristic click.
- (6) After replacing the batteries, set the remote control clock to the current time.


NOTE:

- Use only new batteries.
- Batteries removed from the remote control must be disposed of separately from other waste and in compliance with local laws.

Remote Control Features

1. Operating modes: COOL, HEAT, DRY, FAN and AUTO.
2. 24-hour timer setting function.
3. Internal temperature range: 17°C ~ 30°C.
4. Full functions via LCD (Liquid Crystal Display).

REMOTE CONTROL BUTTON FEATURES

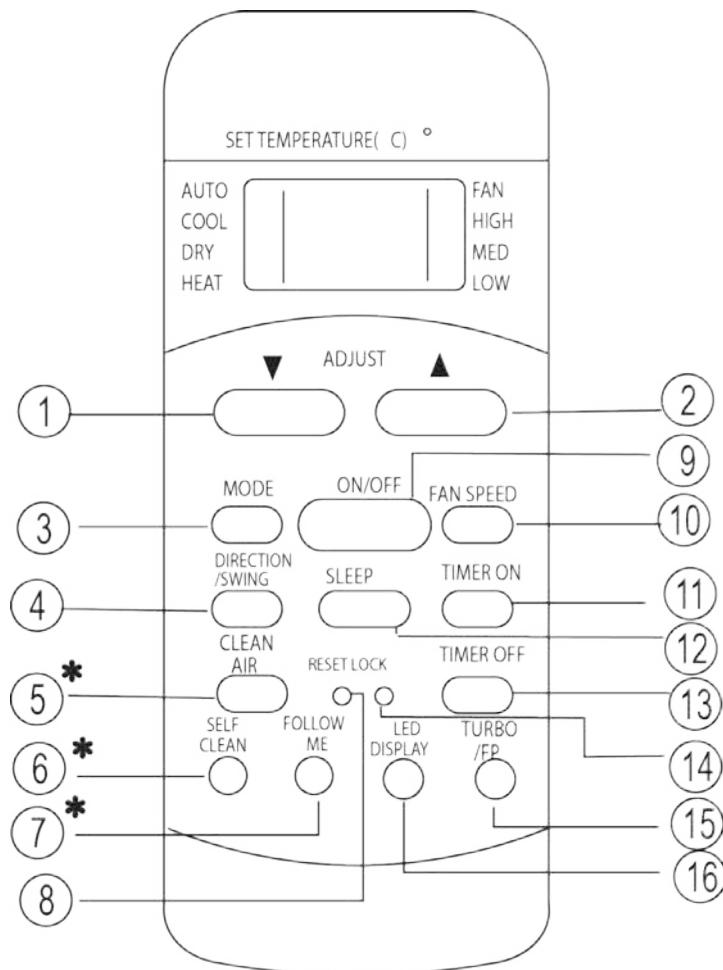

- **NOTE:** The SELF CLEAN and FOLLOW ME buttons are not available for the RG51I29/BG(C)E models.

NOTE: The RG51I43/BGEF model does not have the SELF CLEAN and CLEAN AIR buttons.

NOTE: The RG51I44/BGEF model does not have the CLEAN AIR button.

NOTE:

- The remote control buttons may be slightly different from the one shown depending on the indoor unit models.
- All the functions described are available for the indoor units.
- If the indoor unit does not have this function, pressing the corresponding button on the remote control will not activate any corresponding operation.

1. **TEMP button**:  Press this button to decrease the temperature setting in 1°C increments to a minimum of 17°C.
2. **TEMP button**:  Press this button to increase the temperature setting in 1°C increments up to a maximum of 30°C.
3. **MODE button**: Used to select the operating mode. The following functions can be selected in sequence:
CAR () > COOL () > DRY () >
HEAT () > FAN ()
4. **AIR DIRECTION/SWING button**: Press this button to change the airflow direction of the horizontal louver. Each time you press the button, the louver angle changes by 6°. Press and hold the button for at least 2 seconds, the horizontal louver moves automatically. Press again to stop the swing. If the louver stops in a position where it may adversely affect the cooling or heating effect of the air conditioner, it will automatically change the angle (up or down).
5. **CLEAN AIR button (on some models)**: When you press this button, the Plasma Ionizer collects dust and helps remove pollen and impurities from the air.
6. **SELF CLEAN /AUTO CLEAN button (on some models)**: Pressing this button in COOL or DEHUMIDIFY mode activates the function and prevents the formation of bad odors, allowing the exchanger of the indoor unit to dry. Pressing it again will stop operation and the unit will turn off.
7. **FOLLOW ME button (on some models)**: Press this button to activate the FOLLOW ME function (the infrared remote control becomes a room thermostat). The remote control will send a signal to the air conditioner every 3 minutes to check the room temperature until we intervene by pressing the FOLLOW ME button again. The air conditioner will beep to indicate that the FOLLOW ME function is active; if the air conditioner does not receive the signal from the remote control for more than 7 minutes, the FOLLOW ME function will be deactivated and the reference temperature will be the suction temperature of the indoor unit of the air conditioner.
8. **RESET button**: Once the RESET button is pressed, all current settings will be cleared and the control will return to the initial settings.
9. **ON/OFF button**: Press this button to start the indoor unit. Press it again to stop the unit operation.
10. **FAN SPEED button**: Press the button to select the fan speed in the sequence: AUTO, LOW, MED and HIGH. Each time you press the button, the fan speed selection changes.
11. **TIMER ON button**: Press this button to activate the time setting for the appliance to start. Each press of the button will increase the time setting in 30 minute increments if the setting time is less than 10 hours. When the setting time reaches 10 hours, each press will increase the setting time in 1 hour increments. To cancel the appliance to start function, simply press the button until the time setting is 0.0.

12. SLEEP/ECONOMIC button:Press this button to activate the energy saving mode. Press it again to stop the function. This function is available in the COOL, HEAT or AUTO modes and is used to maintain a more comfortable temperature. The SLEEP/ECONOMIC mode is canceled if the ON / OFF, FAN SPEED, or MODE button is pressed.


13. TIMER OFF button:Press this button to activate the time setting for turning off the appliance. Each press of the button will increase the time setting in 30 minute increments if the setting time is less than 10 hours. When the setting time reaches 10 hours, each press will increase the setting time in 1 hour increments. To cancel the power off function, simply press the button until the time setting is 0.0.

14. LOCK button:Pressing this button (recessed) will lock all current settings and the remote control will not accept any operations other than LOCK. Use the LOCK mode when you want to prevent the settings from being changed accidentally. Press the LOCK button again to cancel the LOCK function. A lock symbol will appear on the remote control display when the LOCK function is activated.

15. TURBO/POWERFULL button:Press this button to activate the Turbo function which allows the unit to reach the set temperature in the shortest time. When you press this button in cooling mode, it will quickly cool the air with the highest fan speed. When you press this button in heating mode (only applicable to units adopting PTC), the PTC will be activated and it will quickly heat up. Note: The system will automatically return to the previous setting after operating in TURBO/POWERFULL mode for about 30 minutes.

16. LED DISPLAY button:Press this button to turn off the display on the indoor unit, press it again to turn the display on again.

Display indicators

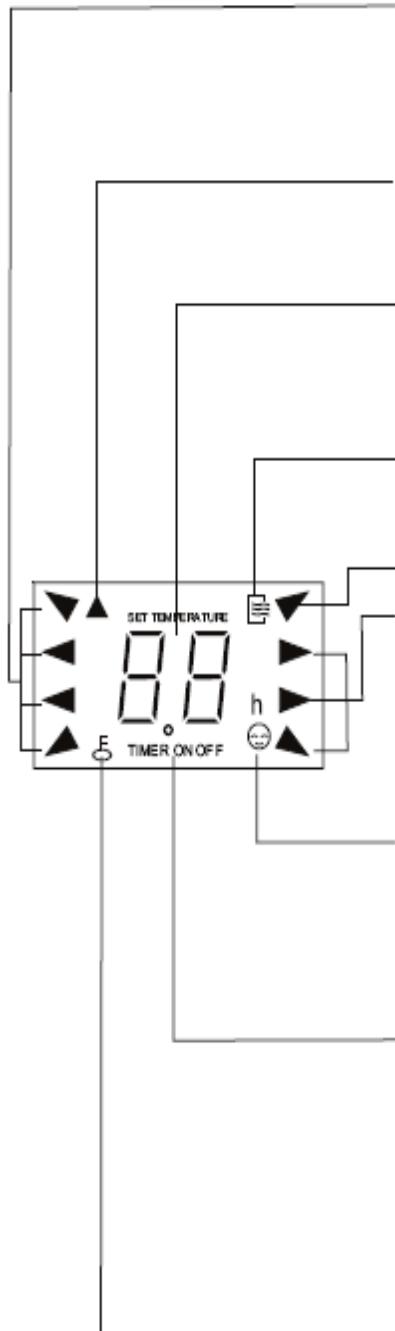

DISPLAY MODE: Displays the current mode selected. Including AUTO, COOL, DRY, HEAT (heating only models), and FAN.

TRANSMISSION INDICATOR: This transmission indicator lights up when the remote control transmits signals to the indoor unit.

TIME/TEMPERATURE: The temperature setting (17°C to 30°C) or timer setting (0~24 hours) will be displayed. If FAN mode is selected, there will be no display.

ON/OFF: This indicator is displayed when the unit is operating.

VENTILATION: Ventilation mode.

VENTILATION SPEED: Displays the selected fan speed: AUTO, HIGH, MED and LOW. Nothing will be displayed when the fan speed has been selected in AUTO speed. When AUTO or DRY mode is selected, there will be no signal displayed.

FOLLOW ME: When you press the FOLLOW ME button in cooling or heating mode, the remote sensing function is activated and this indicator is displayed.


TIMER: This area of the display shows the TIMER settings, so: if only the on function is set, TIMER ON will be displayed. If only the off function is set, TIMER OFF will be displayed. If both functions are set, TIMER ON OFF will be displayed indicating that you have chosen both the on and off function.

LOCK (Display lock): is displayed when the LOCK button is pressed. Press the LOCK button to clear the indicator from the display.

NOTE:

The figure above (which shows all indications at once) is for informational purposes only.

AUTO operation

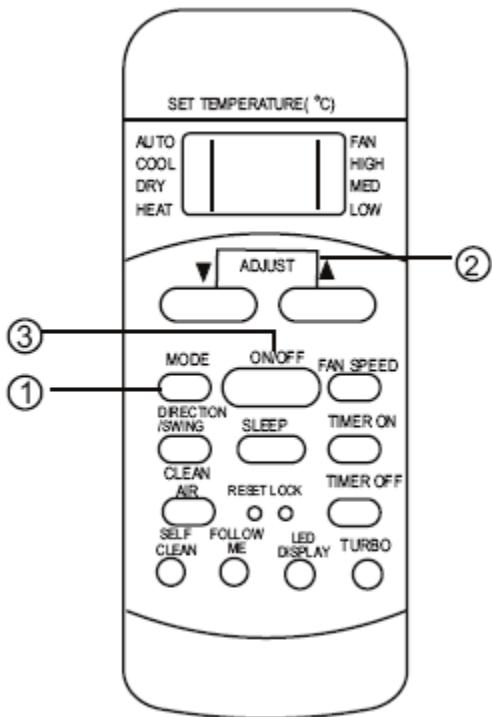

When you set the air conditioner to AUTO mode, it automatically activates cooling, heating (some models only) or fan only operation depending on the temperature that has been selected in the room. Once the operation mode is selected, the operating conditions are saved in memory. The next time you start the air conditioner, you can operate under the same conditions by pressing the ON / OFF button on the remote control.

START:


Make sure the unit is plugged in and power is available. The OPERATION indicator on the indoor unit display window is lit:

1. Selection button (MODE): Press to select AUTO.
2. Temperature button (TEMP): Set the desired temperature.
3. ON/OFF button: Press the ON/OFF button to start the air conditioner.

STOP:

ON / OFF button: Press this button again to stop the air conditioner. If the AUTO mode is not suitable, you can manually select the desired conditions. When you select the AUTO mode, you do not need to set the fan speed. The fan speed will be controlled automatically.

MODE Operation

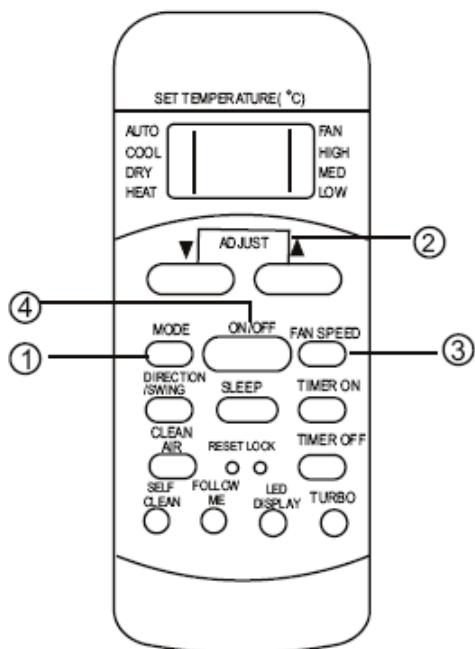

START:

1. Selection button (MODE): Press to select COOL (cooling), HEAT (heating) or FAN (ventilation) mode.
2. Temperature button (TEMP): Set the desired temperature.
3. Fan speed button (FAN SPEED): Press to select the fan speed: "AUTO", "LOW", "MED" and "HIGH".
4. ON/OFF button: Press the ON/OFF button to start the air conditioner.

The OPERATION indicator on the indoor unit display lights up. The operation mode is selected based on the room temperature and starts operating after about 3 minutes (if FAN mode is selected, the unit will start immediately).

STOP:

ON/OFF button: Press this button again to stop the air conditioner operation.

NOTE:

Temperature cannot be controlled in FAN mode.

DRY dehumidification mode

START:

Make sure the unit is plugged in and power is available. The OPERATION indicator on the indoor unit display window is lit:

1. Selection button (MODE): Press to select DRY.
2. Temperature button (TEMP): Press the "TEMP" button to set the desired temperature.
3. ON/OFF button: Press the ON/OFF button to start the air conditioner.

Fan speed cannot be set when the unit is in DRY and no indicator appears on the display.


The fan speed will be automatically selected as LOW.

STOP:


ON/OFF button: Press this button again to stop the air conditioner.

NOTE:

In DRY mode, based on the temperature difference between the set temperature and the actual indoor temperature, the indoor unit automatically operates in COOLING or FAN mode.

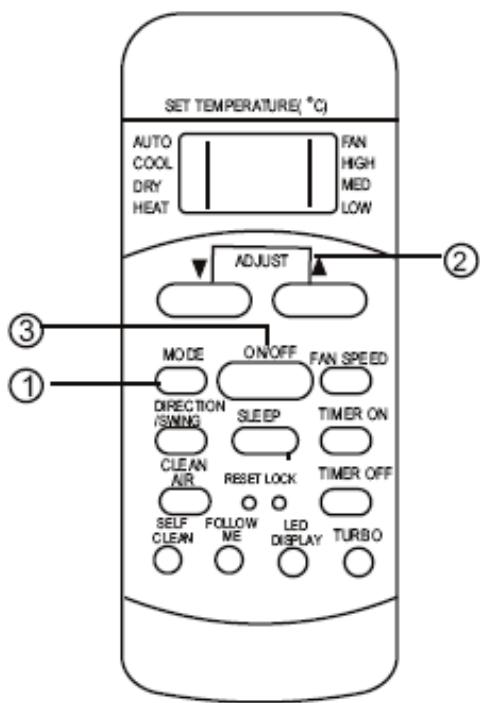

TIMER Operation

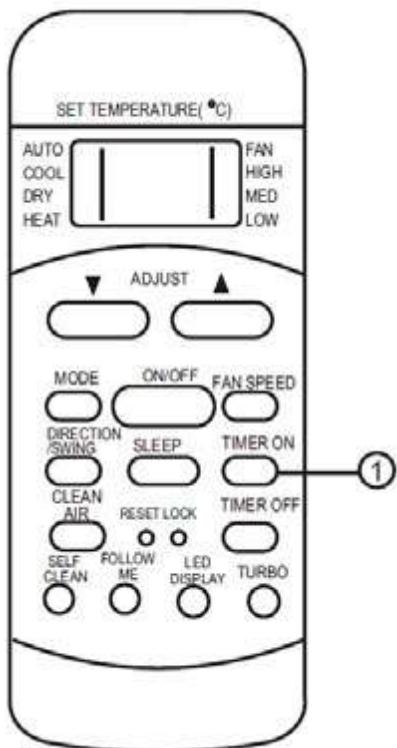

By pressing the TIMER ON button you can set the unit to turn on automatically.

To set the auto start function:


1. Pressing TIMER ON button, the remote control shows TIMER ON with the last auto start setting and the "h" signal will be displayed on the LCD display.

Now you are ready to set the function and start the operation.

2. Press the TIMER ON button again to automatically set the desired time.

Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours. 3. After setting the TIMER ON, there will be a half-second delay before the remote control transmits the signal to the air conditioner.

Then, after about another 2 seconds, the "h" signal will disappear and the set temperature will reappear on the LCD display window.

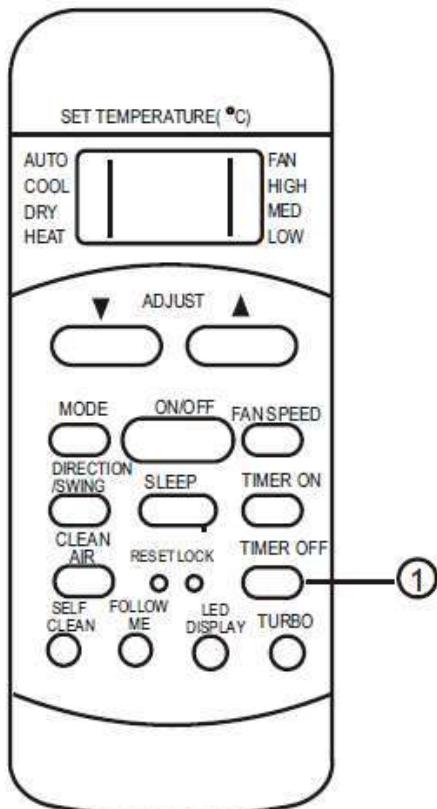

By pressing the TIMER OFF button you can set the unit to turn off automatically.

To set the auto power off function:

1. Press TIMER OFF button, the remote control shows TIMER OFF with last auto-off setting and the "h" signal will be displayed on the LCD display.

Now you are ready to set the function and start the operation.

2. Press the TIMER OFF button again to automatically set the desired time.



Each time you press the button, the time increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours. 3. After setting the TIMER OFF, there will be a half-second delay before the remote control transmits the signal to the air conditioner.

Then, after about another 2 seconds, the "h" signal will disappear and the set temperature will reappear on the LCD display window.

Precautions

The actual operating time set by the remote control for the timer function is limited to the following settings: 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 and 24.

TIMER setting example

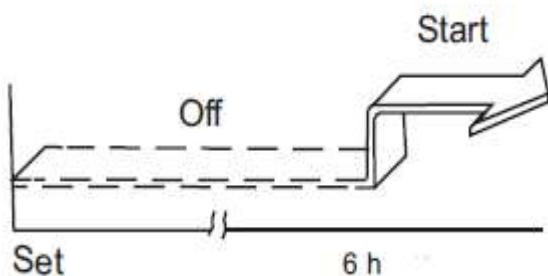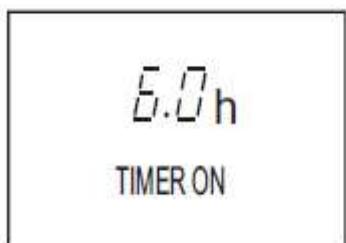

TIMER ON

Auto Start Operation:

The TIMER ON function is useful when you want the unit to turn on automatically after a desired amount of time.



The air conditioner will start working automatically at the set time.

Example:

To start the air conditioner in 6 hours:

1. Press the TIMER ON button with the last starting setting and the "h" signal with the value display will appear.
2. Press the TIMER ON button to display "6.0h" TIMER ON on the remote control display.
3. Wait for about 3 seconds and the digital display area will show the set temperature.

This feature is now enabled.

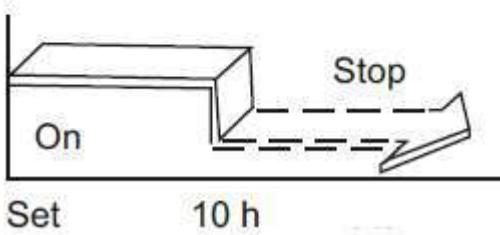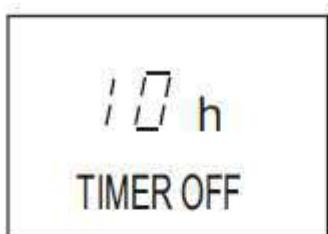

TIMER OFF

Auto Power Off Operation:

The TIMER OFF function is useful when you want the unit to turn off automatically after a desired amount of time.

The air conditioner will automatically stop at the set time.


Example:

To stop the air conditioner in 10 hours: 1. Press the TIMER OFF button with the last off setting and the "h" signal with the value display.

2. Press the TIMER OFF button to display "10h" TIMER OFF on the remote control display.

3. Wait for about 3 seconds and the digital display area will show the set temperature.


This feature is now enabled.

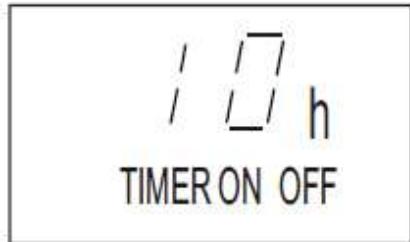

Start and stop combination:

Setting TIMER ON and TIMER OFF at the same time:

TIMER OFF - TIMER ON
(Stop/Start Operation)

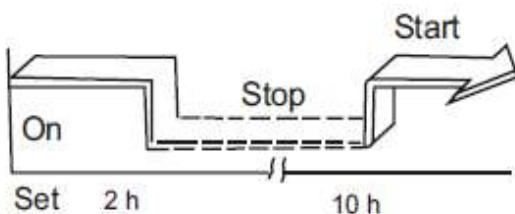

Example:

Stop the air conditioner operation 2 hours after turning it on and restart it automatically 10 hours later: 1.

1. Press the TIMER OFF button.
2. Press the TIMER OFF button again to display 2.0h on the TIMER OFF display.
3. Press the TIMER ON button.
4. Press the TIMER ON button again to display 10h on the TIMER ON display.
5. Wait for the remote control to display the set temperature.




TIMER ON - TIMER OFF
(Start/Stop Operation)

Example :

Start the air conditioner 2 hours after setting, and stop operation 5 hours later:


1. Press the TIMER ON button.
2. Press the TIMER ON button again to display 2.0h on the TIMER ON display.
3. Press the TIMER OFF button.
4. Press the TIMER OFF button again to display 5.0h on the TIMER OFF display.
5. Wait for the remote control to display the set temperature.

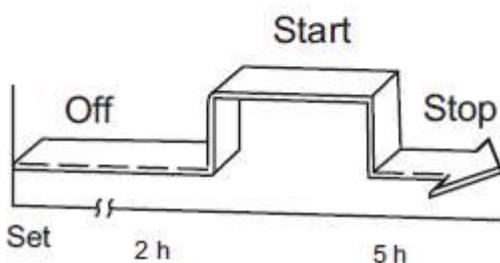

Attention :

- The timer setting (TIMER ON or OFF TIMER) activates and follows the sequence of setting the set time with the lowest value being activated first.
- If the set time is the same for both TIMER ON and TIMER OFF, no timer operation is performed.
- The air conditioner may stop working, immediately or after about 10 minutes.

NIGHT OPERATION

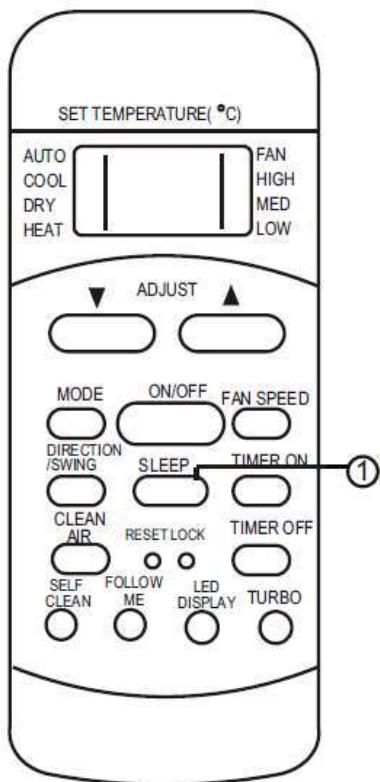


The SLEEP function allows the unit to automatically increase (in cooling) or decrease (in heating) by 1°C per hour for the first two hours of operation and to keep the temperature constant for the next 5 hours, after which the unit will stop automatically operation.

In this way, you can maintain a more comfortable temperature and save energy.

NOTE: The SLEEP function is only available in cooling, heating and AUTO operations.

Lock button (LOCK) and RESET

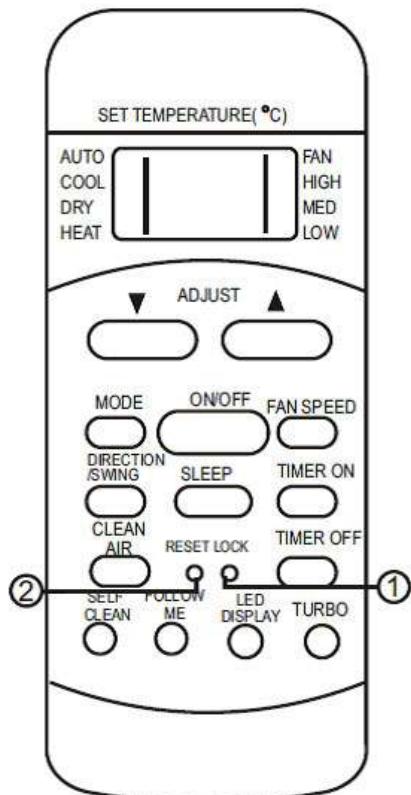


1. When you press the recessed LOCK button, all settings are locked and the remote control does not accept any other operations.

Use LOCK mode when you do not want the settings to be changed accidentally. Press the LOCK button again when you want to cancel LOCK mode.

A lock symbol will appear on the bottom right of the remote control display when the LOCK function is activated.

2. When you press the RESET button, all current settings are cleared and the original factory settings are restored.

Airflow function button

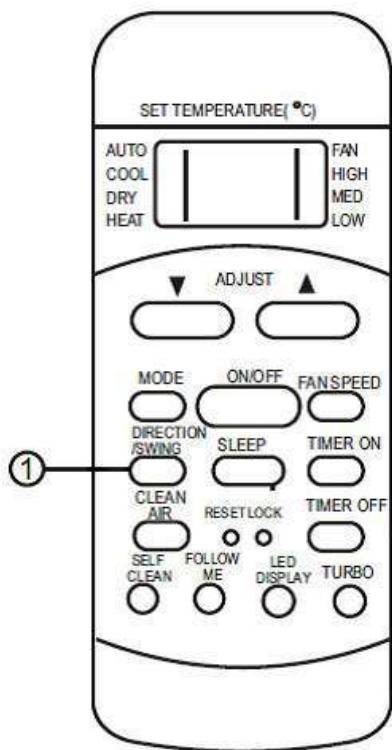

Use the DIRECTION button / SWING button to activate the horizontal vane swing function or lock it in the desired position.

1. When you press this button quickly and once, the deflector is activated. The movement angle of the louver is 6°.

Press and hold the DIRECTION button / SWING button to move the flap to the desired position

2. When you press the button without releasing it for more than 2 seconds, the automatic swing function of the deflector is activated.

The horizontal deflector swings automatically.

Press again to stop the deflector.

Precautions

1. When replacing batteries, do not use old batteries or batteries of a different type than those recommended by the Manufacturer. Otherwise, the remote control may malfunction.
2. If you do not use the remote control for a couple of weeks or more, remove the batteries. Otherwise, the battery fluid leakage may damage the remote control.
3. The average battery life with normal use is about one year. Replace the batteries when the indoor unit does not receive the signal or if the transmission indicator on the remote control does not light up.
4. Make sure there are no barriers between the remote control and the receiver of the indoor unit, otherwise the air conditioner will not work.
5. Keep the remote control away from liquids.
6. Protect the remote control from high temperatures and radiation exposure.
7. Keep the remote control and the air conditioner away from electromagnetic sources produced by other household appliances.



ARYA

well L ness

air

www.aryaclima.it
info@aryaclima.it